

## 4 Slice Toaster White



# IG3020

PO Number:

**Please read these instructions carefully before use and retain for future reference**

**Before switching on you appliance**

**Always check for any damage which may have been caused in transit**

# CONTENTS

Important safety instructions .....	3-4
Specification .....	5
Appliance Overview .....	5
Operating Instructions.....	6-7
Cleaning and Maintenance .....	7
Fuse replacement.....	7
Trouble shooting guide .....	8
Disposal Information.....	9
Igenix Warranty.....	10-11

## SAFETY INSTRUCTIONS

Read and follow all of the instructions even if you feel you are familiar with the product, and find a place to keep this manual handy for future reference.

**Important:** This appliance is intended for use in a domestic environment only. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injury to user or property. When using electrical appliances, basic safety precautions should always be followed:


- Before plugging in the toaster, check if the voltage indicated on the rating label corresponds with the main voltage in your home.
- Do not use the toaster for anything other than its intended use.
- Do not immerse the toaster or cord in water or any other liquid. This toaster is for household indoor use only, do not use it outdoors.
- Do not leave the toaster unattended whilst in use.
- Do not pull on the cord to disconnect the plug from the wall socket, pull the plug instead.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- The toaster should not be used if it has been dropped or if there are visible signs of damage.
- Place the toaster on a stable, level, heat resistant surface, away from an electric or gas hob.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.

- Children should not play with the appliance.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- If the supply cord is damaged, it must be replaced before further use by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- Do not cover the toaster, or put anything on top of it. A fire may be caused if the toaster is covered by or touching flammable materials such as curtains, tea towels or paper towels etc. Do not store any flammable items on or near the toaster.
- The metal slots on the top of the toaster will get very hot. Make sure you do not touch them!
- If bread gets jammed, unplug the toaster and allow it to cool. Remove the bread carefully, but do not use a sharp object such as a knife or fork as this could damage the elements in the toaster.
- Do not try to toast oversized, torn or misshapen pieces of bread as these could jam the toaster.
- Bread may burn, so toasters must not be used near or below curtains and other combustible materials, and must be watched.
- Before moving or attempting to clean the toaster, allow it to cool down completely.
- Do not use the toaster without the crumb tray fitted. Also, ensure the crumb tray is regularly cleaned to avoid any build up of crumbs. This is not only unhygienic but could also cause a fire hazard.
- The toaster should never be switched on through an external timer or any kind of separate remote control system.

## SPECIFICATION

Product	4 Slice Toaster
Voltage	220-240 V
Frequency	50/60 Hz
Wattage Power	1300 W
Settings	6 Browning Levels

## APPLIANCE OVERVIEW

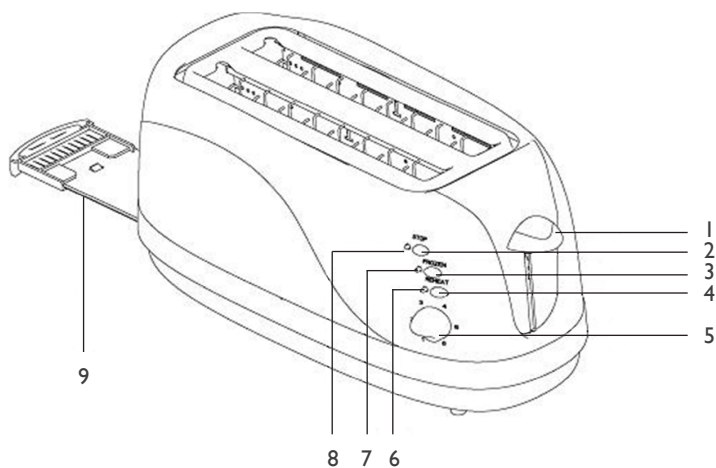

1. Carriage Lever (push down to start toasting)
2. Stop Button
3. Defrost Button
4. Re-heat Button
5. Browning Control
6. Re-heat Indicator
7. Defrost Indicator
8. Power Indicator
9. Crumb Tray

# OPERATING INSTRUCTIONS

## First Use

- Set the Browning Control to grade 3.
- Allow the toaster to run through the toasting cycle without using any bread in it. The toaster may smoke, but this is perfectly normal as the protective finish on the elements burns off. Ensure you are in a well ventilated area when you do this.

## Using Your Toaster

1. Place the toaster upright on a flat, stable, heat-resistant surface.
2. Ensure that the toaster is not touching or near anything that can be damaged by heat.
3. Plug the toaster into the power socket and switch on. Make sure that the power lead cannot be caught easily or does not overhang.
4. Turn the Timer Set Browning Control dial to the required setting. The chart below shows recommended settings.

Grades	Bread Type
1-3	Thin Bread Slice
3-5	Regular Bread Slice
5-6	Thick/Frozen Bread Slice

5. Put the bread into the toasting slots and press the bread carriage lever fully down.  
**Note:** The lever won't stay down unless the toaster is connected to the electricity supply.
6. When the toaster has finished the toasting cycle, the bread carriage lever will pop up allowing you to remove the bread from the toaster. The toasting cycle can be stopped before it has finished by pressing the Stop Button.

## Frozen Bread

This function allows you to toast frozen bread easily as the time is automatically altered to give you the same degree of browning you would get with unfrozen bread.

1. Leave the Timer Browning Control at your usual setting.
2. Insert the bread slices into the slots.
3. Press the bread carriage lever down and then press the Defrost Button. The light of the defrost button will light up to show the toasting time has been altered.
4. When the toaster has finished the toasting cycle, the bread carriage lever will pop up allowing you to remove the bread from the toaster.

**IMPORTANT:** Do not try to defrost frozen bread in the toaster on a low heat setting as this will cause water to drip into the toaster. Toasting frozen bread changes the ice into steam which escapes out of the slots.

## Reheating

This function allows you to reheat bread that has already been toasted by giving it a short burst of heat.

1. Leave the Timer Browning Control at your usual setting.
2. Insert the bread slices into the slots.
3. Press the bread carriage lever down and then press the Reheat Button. The light of the reheat button will light up to show that the toaster is reheating the toast.
4. When the toaster has finished the toasting cycle, the bread carriage lever will pop up allowing you to remove the bread from the toaster.

**Note:** Only unbuttered toast must be reheated.


## IMPORTANT

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press Cancel to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. In order to achieve uniform colour we recommend that you should wait minimum 30 seconds between each toasting so that colour control can reset automatically.
6. When toasting more than one slice of bread, use slices that are of a similar size, thickness and freshness, as old or thin slices of bread toast faster than fresh or thick bread so a lower setting may need to be used. Also, older bread contains less moisture which makes it better for toasting. Sweet breads, such as tea cakes and fruit loaf, brown much quicker than ordinary bread. Ensure you use a lower setting when toasting these breads.

## CLEANING AND MAINTENANCE

- Unplug the toaster and allow to cool down completely.
- Use a soft damp cloth on the outside of the toaster.
- Do not let anything go into the slots as you could possibly damage the elements inside.
- Do not immerse the toaster in water or any other liquid.
- Do not use harsh or abrasive cleaning pads or agents on the toaster as they will damage it.
- Ensure that the crumb tray is regularly cleaned to stop a build up of crumbs in the toaster. This is not only unhygienic but can also be a potential fire hazard.
- Always ensure that the crumb tray is fitted when using the toaster.

## FUSE REPLACEMENT

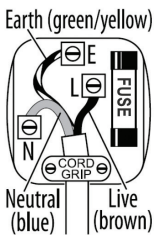

### Fuse Replacement (Class I)

This appliance must be earthed. Remove the central screw on the plug and open the shell. Take out the fuse and replace with a new fuse of the same Amp. Install the shell again and tighten the screws.

## TROUBLE SHOOTING GUIDE

If you are having problems with your toaster, please use our troubleshooting guide below. If you are unable to resolve the issue using the guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Problem	Possible Cause	Possible Solution
The toaster does not work.	Not properly plugged into the mains wall socket.	Plug in firmly.
	No electricity in the mains wall socket.	Check fuse or breaker.
The toaster smokes when it is used.	The protective film is burning off the elements.	This is perfectly normal and will stop with use.
	Crumb tray is full and needs emptying.	Empty the crumb tray regularly.
The toaster carriage lever won't stay down.	The toaster is not plugged into the electrical supply.	Plug the toaster into power socket and switch on.
The toaster is not browning the toast enough.	The browning control is set too low.	Turn up the browning control to a higher number.
	The bread you are using is fresh and therefore contains more moisture.	Turn up the browning control as fresh bread takes longer to toast than bread that is 1 or 2 days old.
The toaster is burning the bread.	The browning control is set too high.	Turn the browning control to a lower setting.



## DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



## Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department  
38 Bluestem Road, Ransomes Europark  
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the "PO Number" on the front of the instruction manual and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



## **Thank you for choosing Igenix**

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **[www.igenix.co.uk](http://www.igenix.co.uk)**

To register your product, visit the Igenix website and complete the online form.

# **igenix**

**38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR**

**Tel. 01473 271 272**

Disclaimer: Igenix operate a policy of continual improvement and development.  
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.  
All diagrams and images shown in this manual are for illustration purposes only.