

72w, 60cm, Visor Cooker Hood Stainless Steel/White



IGCH092 | SS/ IGCH08 | 75W

Please read these instructions carefully before use and retain for future reference.

**Before switching on your appliance,
always check for any damage which may have been caused in transit.**

CONTENTS

Important Safety Instructions.....	3-4
Parts Included	5
Product Specification.....	6
Installation.....	7-11
Operating Instructions.....	12
Cleaning and Maintenance	13-15
Troubleshooting Guide	16
Fuse Replacement	17
Disposal Information.....	17
Igenix Warranty Terms & Conditions	18-19

IMPORTANT SAFETY INSTRUCTIONS

Please ensure you read all instructions and warnings in this user guide prior to first use. Keep this user guide for future reference.


- The installation and repair work must be undertaken by a qualified and competent person.
- The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions of installation.
- The cooker hood supply should be 220V~240V/ 50Hz
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- When the hood is in repair, maintenance, replacement of parts, please pull out the plug to ensure the safety of people.
- Plug the power cord into the power socket outlet with earthing continuity terminal.
- The cooker hood is for home use only, not suitable for commercial purposes.
- The cooker hood and its filter mesh should be cleaned regularly according to the instructions.
- Do not leave frying pans unattended during use as fats or oils may catch on fire.
- Do not try to use the cooker hoods without the grease filters or if the grease filters are excessively greasy.
- Do not use open flame or allow oil to go beneath the appliance.
- Do not check the status of the filters whilst the cooker hood is operating.
- Do not touch the light bulb within half an hour after appliance is used.
- Regulations concerning the discharge of air must be fulfilled.
- Extension sockets are forbidden.
- Please cut off the power before maintenance.
- This appliance has been designed for home use only and may cause danger if used in special occasions.
- If any fault occurs with the appliance, please call after-sale service department.

- Please keep the kitchen well-ventilated when in use.
- Prior to any maintenance or cleaning, ensure the power is off.
- Constantly check food frying to avoid the overheating of oil which may become a fire hazard.
- If the power cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid a hazard.
- If the plug or cord is damaged, please call after-sale service centre.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- In case of a damaged connecting wire, please refer to the manufacturer, after-sale service personnel or other qualified technicians.
- Use the unit according to the instructions to avoid fire hazard.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- Do not flambé under the range hood.
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- To protect the main body from corrosion of the long-term accumulation of dirt, the cooker hood should be cleaned with hot water & non-corrosive detergent every 2 months.
- The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the range hood. (When the range hood is located above a gas appliance, this distance shall be at least 65 cm. If the instructions for installation for the gas hob specify a greater distance, this must be taken into account. The distance of 65cm can be reduced for non-combustible parts of range hoods, and parts operating at safety extra low voltage, provided these parts do not give access to live parts if deformed).





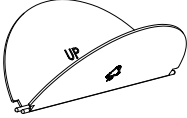
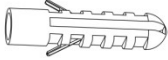
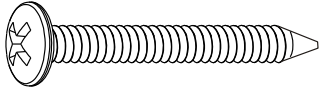



CAUTION: Accessible parts may become hot when used with cooking appliance.

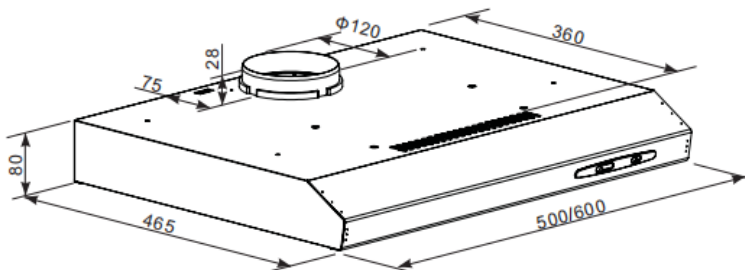Dimensions of Cooker Hood (mm):



PARTS INCLUDED

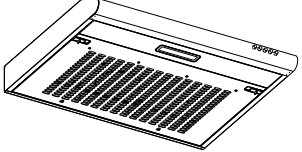Important: The carbon filter is NOT included.

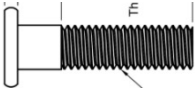
No.	Description	QTY	Images
1	Cooker Hood	1	
2	Air Outlet	1	
3	V-Flap	2	
4	Wall Plug	4	
5	ST4*30mm Screw	4	
6	Large Flat Washer	8	
7	M4 Nut	4	
8	ST4*35mm Screw	4	

PRODUCT SPECIFICATION


Model:	IGCH0921ISS / IGCH08175W
Power:	72W
Voltage/Frequency	220V~240V/ 50Hz
Product Dimensions (mm):	H:108 x W: 600 x D:465
Settings:	3 settings (3-high, 2-medium, 1-low)
Net Weight (Kg):	5
Energy Efficiency Rating:	B
Cable Length (M)	1.4
Airflow at maximum speed in normal use (m³/h)	212.2
Lamp Power (W)	2
Electrical Class	Class II

INSTALLATION

If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminium, flexible pipe or non-flammable material with an interior diameter of 120mm).

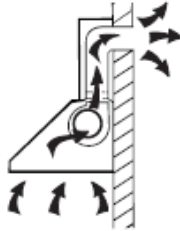

Please Note: Before installation, ensure the unit is off and unplugged from the outlet.


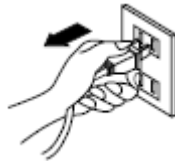


The cooker hood should be placed at a distance of 65-75cm from the cooking surface for optimal effectiveness.



Please Note: There are 2 methods for ventilation, including 'horizontal ventilation' and 'vertical ventilation'. Please pay attention to the ventilation method when installation.

- **Horizontal Ventilation:** See Pic A, please use tool to remove the rectangle outlet cover on the back, the outlet cover on the top remains sealed, and then the air can be vented from back.
- **Vertical Ventilation:** See Pic B, please use the tool to remove the round outlet cover on the top, the outlet cover on the back should remain sealed, and then the air can be vented from top.

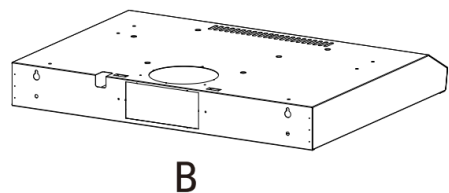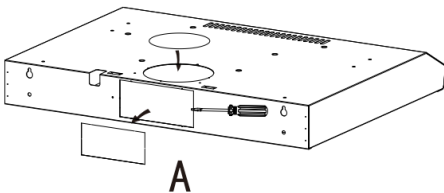

The following is required for installation:

- Drill
- Flat head screwdriver
- Phillips head screwdriver/cordless drill and Phillips head bit
- Tin snips
- 3/8" nut driver or ratchet with extension
- Measuring tape
- Hand saw or jig saw
- Electrical tap
- Duct tape

1. Remove the hood from the packaging.
2. Lay the hood upside down on a table covered with cardboard or paper to prevent scratching or scuff marks.
3. Hood Installation should be within 0.8m radius range


IMPORTANT

Installation work and electrical wiring must be done by a qualified person in accordance with all applicable codes and standards, including fire rated construction.


Method A (Wall Mounting):

Before installing, ensure the voltage (V) and the frequency (Hz) indicated on the rating plate match the voltage and frequency at the installation site. Protect the cooker top surface below with cardboard, or similar, to prevent damage occurring whilst the wall canopy is being installed above



1. To mount onto the wall, drill 4 x 8mm diameter holes in a suitable place- these holes must align perfectly with the cooker hood. Insert wall plugs into the holes drilled.

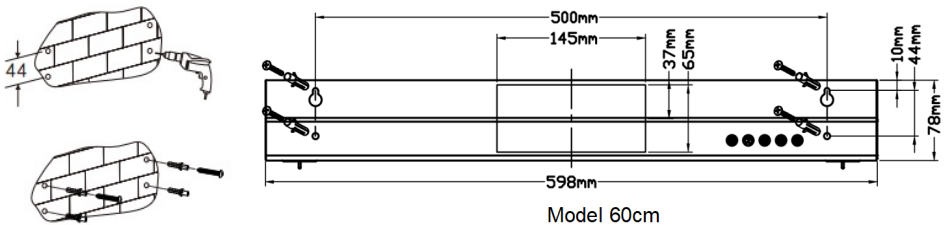

2. Install 2pcs screws into the wall plugs and tighten them. Ensure to leave a 2-3mm gap between the screws and the wall for hanging the cooker hood.

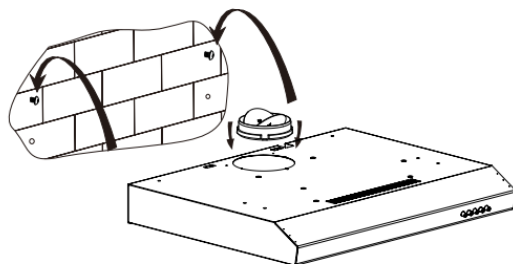


3. Install v-flap onto the air outlet. Hang the cooker hood onto the fixed screws and then fix the cooker hood with safety screws. Install the expansion pipe onto the cooker hood and lead it to outdoors.

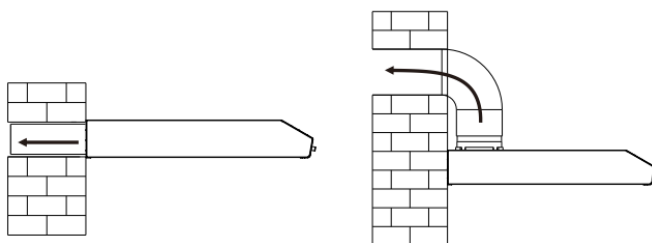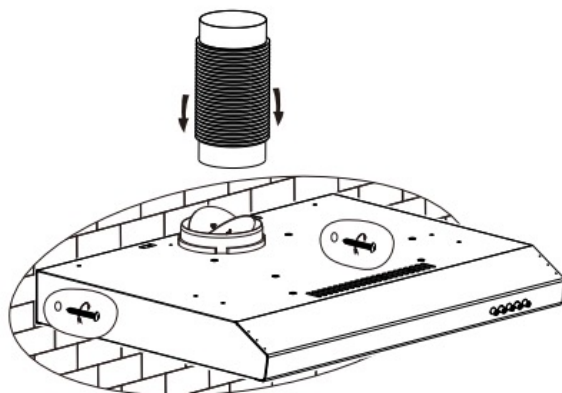


Method B (Cabinet Mounting)

1. Drill 4pcs holes with a diameter of 6mm at the bottom of the hanging cabinet.
2. Install v-flap onto the air outlet.
3. Install the cooker hood onto the bottom of cabinet and fix it with 4 x screws M4, 8 x gaskets and 4 x nuts M4.
4. Install expansion pipe onto the cooker hood and lead it to outdoor

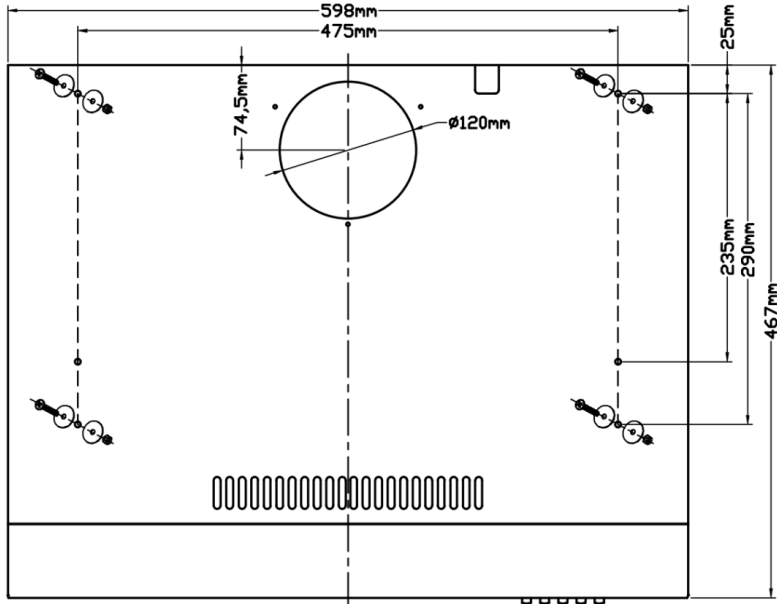

Model 60cm

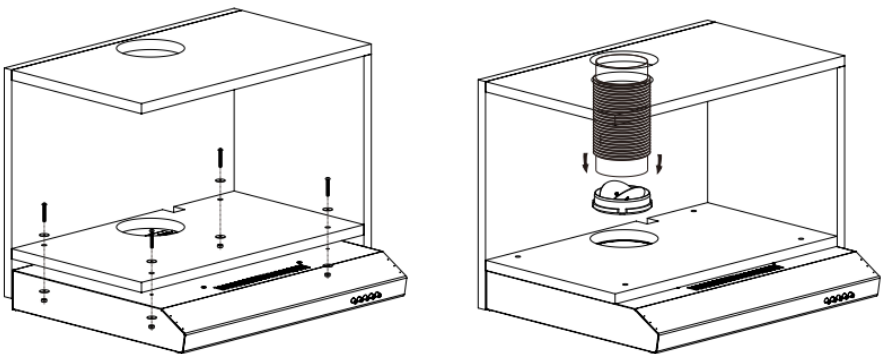


Please Note: The expansion pipe is not included in the product for any installation.

IMPORTANT: When assessing the air pressure, the ventilation system of the whole house/apartment must be taken into consideration, e.g. hob and gas cookers. Government regulations must be adhered to for the extraction of exhaust air. If the extractor hood is used without a duct (air circulating mode) but with an activated carbon filter, there are no operating restrictions.

Air Ventilation Setting

Outdoor Air Ventilation: Turn the adjuster to outdoor position (pic A), install the outlet, turn on the cooker hood, then the air will be vented from the outside outlet.

Indoor Air Ventilation: Turn the adjuster to indoor position (pic B), install the outlet cover, turn on the cooker hood, then the air can be vented from the inside outlet

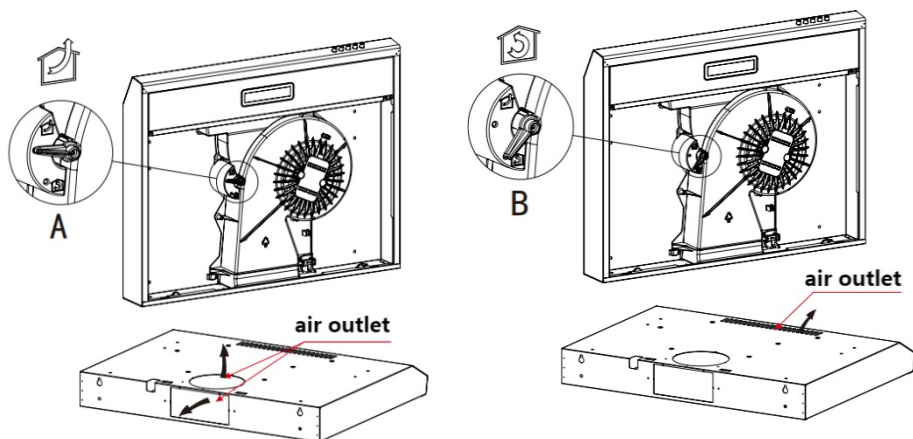

WARNING:



- For safety reason, please use only the same size of fixing or mounting screws which are recommended in this instruction manual.
- Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

OPERATING INSTRUCTIONS

Toggle Switch

There are 3 speeds for the motor and an on/off switch for the lamp. Slide the switch for operation.

Motor Operation:

- 0- Off
- 1- Low Power Setting
- 2- Mid Power Setting
- 3- High Power Setting

Light Operation:

- 0- Off
- 1- On



CLEANING AND MAINTENANCE



CAUTION: Before maintenance or cleaning is carried out, the cooker hood should be disconnected from the mains power supply. Ensure that the cooker hood is switched off at the wall and unplugged.

External surfaces are susceptible to scratches and abrasions- Please follow the below cleaning instructions to receive the best possible results without causing damage to the unit.

GENERAL

Cleaning and maintenance should be carried out with the appliance cold. Avoid leaving alkaline or acid substances (lemon juice, vinegar etc.) on the surfaces.

STAINLESS STEEL

The stainless steel must be cleaned regularly (e.g. Weekly) to ensure a long-life expectancy. Dry with a clean, soft cloth. A specialized stainless steel cleaning fluid may be used.

Please Note: Ensure that wiping is done along with the grain of the stainless steel to prevent any unsightly crisscross scratching patterns from appearing.

CONTROL PANEL SURFACE

The inlay control panel can be cleaned using warm soapy water. Ensure the cloth is clean and well wrung before cleaning. Use a dry soft cloth to remove any excess moisture left after cleaning.



Important: Using neutral detergents and avoid using harsh cleaning chemicals, strong household detergents or products containing abrasives, as this will affect the appearance of the appliance and potentially remove any printing of artwork on the control panel and void the manufacturer's warranty.



Important: When cleaning, water must not enter the motor, control switch or electrical parts.

GREASE MESH FILTERS

It is recommended to clean the metallic filter every 3 months by carrying out the following instructions.

The mesh filters can be cleaned by hand. Soak them for approximately 3 minutes in water with a mild detergent and then brush it gently with a soft brush. Do not apply too much pressure to avoid any damage. Leave to dry naturally out of direct sun light


Filters should be washed separately to crockery and kitchen utensils. It is advisable not to use rinse aid.

The metallic filter may alter in colour after several washes. This is not cause for concern or replacement of metallic filter


CARBON FILTER (Not Included in the Product)

Activated carbon filters can be used to trap odors. Normally the activated carbon filter should be changed every 3 to 6 months depending on frequency of use. The installation procedure of activated carbon filter is as below:

1. Remove the grease mesh filter.
2. Take away the steel wires with proper strength and replace the new carbon filter onto the grease filter. (Pic 1)
3. Fix the properly adjusted carbon filter with the steel wires. (Pic 2)
4. Reinstall the grease mesh filter.

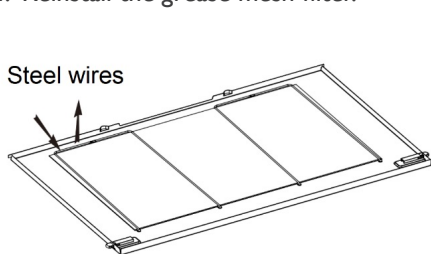

Pic 1

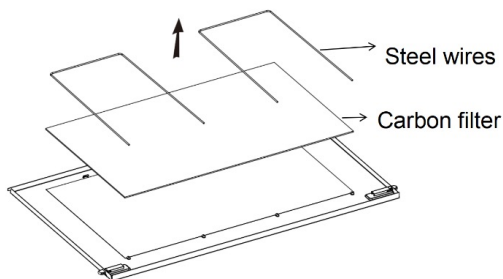

Pic 2

Please Note:

- Make sure the filter is securely locked. Otherwise, it will loosen and may cause danger.
- When activated carbon filter is attached, the suction power will be lowered.

Replacement Bulb



IMPORTANT:



- The bulb must be replaced by the manufacturer, its service agent or similarly qualified persons.
- Always switch off the electricity supply before carrying out any operations on the appliance. When handling bulb, make sure it has completely cooled down before any direct contact with hands.
- When handling bulbs hold with a cloth or wear gloves to ensure perspiration does not come in contact with the bulb as this can reduce the life of the bulb.

- Remove grease filter
- Use cross screwdriver to remove screws on both sides of lamp plate and then remove the lamp plate. (Step 2)
- Use cross screwdriver to remove 3 screws on the junction box cover and then remove the junction box cover. (Step 3)
- Find and disconnect the terminal on the light connecting wire that requires replacement. (Step 4)
- Remove the light and replace new one. (Step 5)
- Apply the reverse procedure to install the light back.

Dimensions:

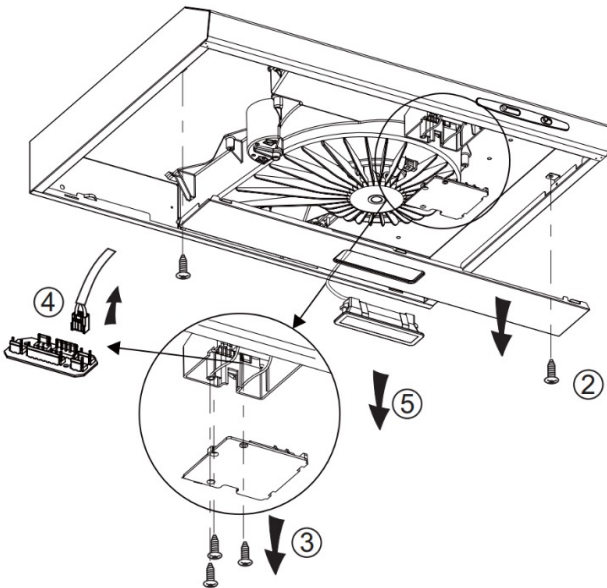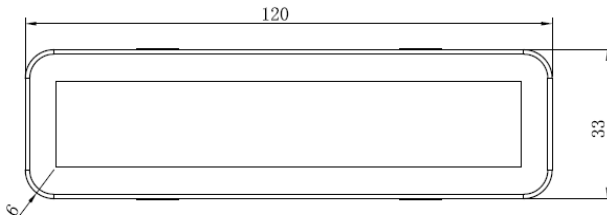

- ILCOS D code for this lamp is: DBS-2/65-H-120/33
- Lamp modules: Rectangle Lamp
- Max Wattage: 1 ×2W
- Voltage Range: AC 110-240V

TROUBLESHOOTING GUIDE

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services on 01473 271272:

Fault	Possible Cause	Solution
Light on but motor does not work	Fan switch turned off	Select a fan switch position
	Fan switch failed	Contact service center
	Motor failed	Contact service center
Light and motor does not work	House fuses blown	Reset/Replace fuses
	Mains power cable is loose or disconnected	Refit mains power cable to power outlet Switch power outlet on
Oil leakage	One way valve and the outlet are not tightly sealed	Take down the one-way valve and seal with sealant
	Leakage from the connection of chimney and cover	Take chimney down and seal
Lights not working	Broken or faulty bulbs	Replace bulbs as per the instructions further along in this manual
Insufficient suction	The distance between the cooker hood and the gas top is too far	Refit the cooker hood to the correct distance
The cooker hood inclines	The fixing screw is not tight enough	Tighten the hanging screw and make it horizontal



Please Note:

Any electrical repairs to this appliance must conform to your local, city and federal laws. Please contact the service center if in any doubt before undertaking any of the above. Always disconnect the unit from the power source when opening the unit.

MAINS PLUG FUSE REPLACEMENT



Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the rating label, and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

igenix

UK: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.