

I.25L 750W Filter Coffee Maker Black**IGCM01286B**

Please read these instructions carefully before use and retain for future reference.

Before switching on your appliance, always check for any damage which may have been caused in transit.

CONTENTS

Important Safety Instructions.....	3-4
Specification	5
Appliance Overview	6
Operating Instructions.....	7
Cleaning & Maintenance.....	8-9
Trouble Shooting Guide.....	10
Fuse Replacement.....	11
Disposal Information.....	11
Igenix Warranty Information	12-13

IMPORTANT SAFETY INSTRUCTIONS

Please read this user manual carefully before using your appliance to ensure proper use and maintenance.

1. This appliance is intended for domestic use; to be used in a household or similar applications such as
 - a. Staff kitchen areas in shops, offices and other working environments;
 - b. By clients in hotels, motels and other residential type environments;
 - c. Bed and breakfast type environments.
2. Do not operate the appliance with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way.
3. All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
4. Make sure the voltage in your home corresponds to the one shown on the rating label of the appliance.
5. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
6. Cleaning and user maintenance shall not be conducted by children.
7. Keep the appliance and its cord away from children aged 8 years and below.
8. Children shall not play with the appliance.
9. This appliance can be used by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
10. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
11. Do not place the appliance on or near a hot gas or electric burner or a heated oven.
12. Do not operate the appliance without water to avoid damaging the heat elements.

13. To protect against a fire, electric shock or personal injury, do not immerse the cord or the electric plug in water or any other liquids.
14. Some parts of the appliance will turn hot when in operation – Do not touch the hot body surface of the appliance, use the handle or the buttons instead.
15. Extreme caution must be exercised when moving an appliance containing hot water.
16. The use of accessories, which are not recommended by the manufacturer, may result in a fire, electric shock or personal injury.
17. Unplug the appliance from the wall socket when not in use and before cleaning. Allow the appliance to cool before cleaning.
18. Do not use the appliance near facilities containing water, such as bathtubs, showers or wash basins.
19. The glass carafe is designed to use along with this appliance. It cannot be used on a range or cooker top.
20. Do not leave the empty glass carafe on the warming plate, as this may cause it to crack.
21. Do not clean the glass carafe with cleansers, steel wool pads, or any other abrasive materials.
22. To switch off and disconnect the appliance, turn the power control to the “off” position and then remove the plug from the wall outlet. Always hold the plug and never pull the cord.
23. Do not use the appliance for anything other than its intended use and always place and store it in a dry environment.
24. Never use the appliance if the glass carafe shows any signs of cracks or if the handle is loose or has been weakened in any way. Only use the glass carafe that comes with this appliance. Use carefully as the glass carafe is very fragile.
25. Do not place the hot glass carafe directly on to a worktop.
26. Scalding may occur if the cover is removed during brewing cycles.
27. Do not use the appliance in any outdoor environments.

SPECIFICATION

Model:	IGCM01286B
Power:	750W
Voltage/Frequency:	220-240V~50-60Hz
Capacity:	1.25L
Product Dimensions (mm):	H:289 x W:166 x D:236
Net Weight:	1.17kg

For further information about this product, including the power consumption in low power modes required by (EU) 2023/826, go to <https://www.igenix.co.uk> and search for IGCM01286B.

APPLIANCE OVERVIEW



1. Top Cover
2. Sprayer
3. Funnel
4. Filter
5. Water Tank
6. Glass Carafe
7. Warming Plate
8. Water Gauge
9. Main Housing
10. On/Off Power Button

Before First Use

Check that all accessories are included and the appliance is not damaged. Fill the water tank with clean water up to the maximum level and run the brewing cycle several times without adding ground coffee by following the steps below. Discard the water after each cycle. Wash all detachable parts thoroughly with warm water.

OPERATING INSTRUCTIONS

1. Open the top cover and fill the water tank with cold drinking water. The water level should not exceed the MAX level as indicated on the water gauge.
2. Ensure the funnel and the nylon filter is clean and fitted correctly.
3. Add ground coffee into the nylon filter using the black spoon provided. Usually, a cup of coffee will need one spoonful of ground coffee. But you may adjust according to your own personal taste.
4. Close the top cover.
5. Place the glass carafe onto the warming plate.
6. Plug the power cord into the mains wall socket.
7. Press the "ON/OFF" power button. The red indicator will illuminate, and the brewing process will begin automatically.

Please Note: During the brewing process you may remove the glass carafe to serve. The coffee maker will stop dripping automatically. However, if the serve time exceeds 30 seconds, coffee may overflow the funnel and the filter.

- After brewing is complete (approximately one minute after the coffee stops dripping), you can carefully remove the glass carafe to pour and serve.

Please Note: The volume of brewed coffee will be slightly less than the amount of water added to the tank, as some water is absorbed by the ground coffee.

 **CAUTION:** DO NOT touch the cover or the warming plate during operation as they can become extremely hot.

If you do not wish to serve the coffee immediately after brewing, you may leave the appliance switched on. The warming plate will keep the coffee warm for up to 40 minutes, after which the appliance will automatically switch off. For an optimum coffee taste, it is recommended to serve the coffee immediately after brewing. Always switch off the coffee maker and disconnect the power supply after use.

 **CAUTION:** The brewed coffee will be very hot. Please pour carefully to avoid any risk of scalding.

CLEANING AND MAINTENANCE



CAUTION: Always unplug the appliance from the mains wall socket and allow the warming plate to cool completely before cleaning. Never immerse the appliance or the power cord in water or any other liquid.

1. Clean all detachable parts with hot and soapy water after each use.
2. Wipe the exterior surface with a soft and damp cloth to remove stains.
3. Water droplets may build-up in the area above the funnel and drip onto the base during brewing. To reduce dripping, wipe the area with a clean and dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use any abrasive cleaners as it may damage the surface.
5. Once cleaned and dried, reassemble all detachable parts correctly before storing or using the appliance again.

Descaling your Appliance

To maintain optimal performance, you should periodically descale your coffee maker to remove limescale buildup. The frequency of descaling will depend on the hardness of your local water and how often the appliance is used. We recommend descaling your appliance as follows, using a solution of white vinegar and cold water. A solution of two tablespoons (30ml) white vinegar in one carafe of cold water works best.

1. Fill the water tank with the vinegar solution to the MAX level as indicated on the water gauge.
2. Insert the glass carafe onto the warming plate.
3. Ensure that the nylon filter (without ground coffee) and the funnel are assembled in place.
4. Switch on the appliance and allow it to “brew” the vinegar solution.
5. After “brewing” one cup of the solution, switch off the appliance.
6. Leave the solution for 15 minutes and repeat step 3-5 until the water tank is completely empty.
7. Rinse by operating the appliance with water at least 3 times.

Hints For Great-Tasting Coffee

- A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING & MAINTENANCE” section.
- Always fill the coffee maker with fresh and cold drinking water.
- Always store unused ground coffee in a cool and dry place. After opening a package of ground coffee, reseal it tightly and store it inside the refrigerator to maintain its freshness.
- For an optimum coffee taste, use whole coffee beans and grind them just before brewing.
- Do not reuse ground coffee as this will greatly reduce the coffee’s flavour. Reheating coffee is also not recommended as coffee is at its peak flavour immediately after brewing.
- Clean the coffee maker if you notice an oily film on the surface of your brewed coffee. This is caused by over-extraction of oils from the ground coffee.
- Oiliness may occur more frequently when using dark or heavily roasted coffee beans.

TROUBLE SHOOTING GUIDE

Fault	Possible Cause	Solution
Appliance does not work.	Mains plug is not plugged in or is loose.	Insert mains plug.
	Fuse has blown or is defective.	Check fuse, replace if necessary.
	Socket is defective.	Mains malfunctions are to be corrected by an electrician.
Water not heating up.	Thermostat is broken.	Contact Igenix 01473 271 272, with product code and guarantee details.
Liquid found under the appliance.	Water tank may have a crack or the water tube has split or broken.	Contact Igenix 01473 271 272, with product code and guarantee details.
Condensation is forming on the appliance.	Condensation has gathered after continuous use.	Allow the appliance to cool down after each use.
Reduced or no liquid flow (only producing 3 cups when water tank is filled up to MAX level.)	Water tube has become blocked.	Appliance needs descaling, see "Cleaning and Maintenance" in the instruction manual
	Funnel has become blocked.	Check that the filter isn't damaged and allows lumps of coffee powder to form in the funnel.
Coffee powder is not dissolving properly.	Coffee powder has become damp and has formed clumps as condensation got into the powder.	Store coffee powder in an air tight container in a cool dark place to keep it dry. Only use dry coffee powder.
Making less cups of coffee than the water gauge says.	The coffee powder will soak up some of the water in filtration.	Initially add a little more water than the gauge says to allow for the short fall, ensuring not to go over the maximum.
	Anti-drip valve at the bottom of funnel is not released.	Close glass jug lid. The lid should be closed before placing the jug in correct position.

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.



DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the rating label on the bottom of the product and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. www.igenix.co.uk

igenix

UK: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.