

41 Inch Bladeless Fan



IGFD02549W

Please read these instructions carefully before use and retain for future reference.

**Before switching on your appliance,
always check for any damage which may have been caused in transit.**

CONTENTS

Important Safety Instructions.....	3-4
Appliance Overview	5
Product Assembly.....	6-7
Operating Instructions.....	8
Interface Overview.....	9-11
Cleaning and Maintenance	12-13
Trouble Shooting Guide.....	14
Specification Table	15
Fuse Replacement.....	16
Disposal Information.....	17
Terms and Conditions and Warranty Information.....	18-19

IMPORTANT SAFETY INSTRUCTIONS

 
Read all safety guidelines and operating instructions carefully before use.

- This appliance may be operated by children aged 8 years and above, or by individuals with reduced physical, sensory, or mental capabilities, provided they have been properly instructed on safe operation and understand the associated risks.
- Children must not play with the appliance. Cleaning and maintenance should only be carried out by children under adult supervision.
- Once the fan is assembled, the rotor blade guard must remain securely in place and must not be removed.
- Always unplug the fan from the power supply before cleaning.
- The rotor guard must not be opened or removed for cleaning the internal rotor blades.
- Wipe the fan enclosure and rotor guard with a soft, slightly damp cloth. Do not use abrasive cleaners or immerse any part of the appliance in water.
- Read all safety guidelines and operating instructions carefully before use.
- This appliance may be operated by children aged eight years and above, or by individuals with reduced physical, sensory, or mental capabilities, provided they have been properly instructed on safe operation and understand the associated risks.
- Children must not play with the appliance, and cleaning or maintenance should only be carried out by children under adult supervision.
- Once the fan is assembled, the rotor blade guard must remain securely in place and must not be removed.
- Always unplug the fan from the power supply before cleaning.
- The rotor guard must not be opened or removed for cleaning the internal rotor blades.
- Wipe the fan enclosure and rotor guard with a soft, slightly damp cloth. Do not use abrasive cleaners or immerse any part of the appliance in water.
- If the power cord becomes damaged, it must be replaced by the manufacturer, an authorized service agent, or a qualified technician to prevent any risk of hazard.
- Do not immerse the appliance, power cord, or plug in water or any other liquid to avoid electrical shock.
- Always disconnect the appliance from the power outlet when it is not in use and before cleaning.

- Do not dispose of this appliance with regular household waste. At the end of its service life, deliver it to an appropriate collection point for recycling electrical and electronic equipment. Recycling helps conserve natural resources and ensures environmentally responsible disposal.
- This appliance must only be operated with the power supply unit provided by the manufacturer.
- Ensure the fan is placed on a flat, stable surface and not near edges where it could fall.
- Keep the air intake and outlet clear of obstructions and do not cover the fan while it is operating.
- Do not use the appliance outdoors or in damp areas such as bathrooms to prevent electrical hazards.
- Connect the appliance only to a properly grounded outlet that matches the voltage specified on the rating label.
- Do not insert fingers or objects into the air outlet or intake openings.
- Do not attempt to repair or modify the appliance yourself; contact an authorized service centre for assistance.
- If the appliance overheats or malfunctions, switch it off immediately and unplug it.
- Do not pull the cord to unplug the appliance; keep the cord away from heated surfaces and ensure it is not pinched or trapped.
- Always unplug the appliance before moving it to prevent damage or injury.

APPLIANCE OVERVIEW

Please Note: All images in this manual are provided for reference only. If there is any difference between the illustrations and the actual product, the product should be considered correct.

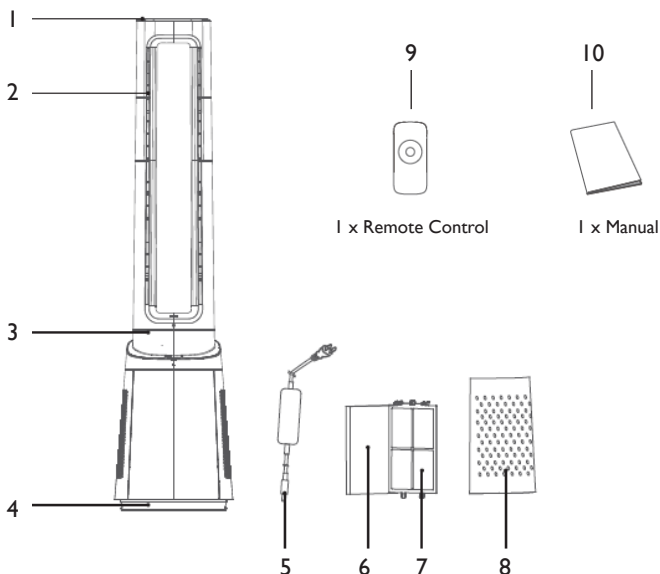

No.	Description	No.	Description
1	Upper Cover	6	Hepa Filter x2
2	Filter Cover	7	Pre-Filter x2
3	Display & Control Panel	8	Filter Covers x2
4	Units Base	9	Remote Control
5	Adapter	10	Instruction manual

Additional Features

Intelligent Memory

When the fan is turned off or loses power, it will resume its previous operating state when powered on again.

 
Please Note: The timer setting is not saved.

Screen-Off Function


If no buttons are pressed for 60 seconds during normal operation, the display indicators will turn off, but the fan will continue running. Press the ON/OFF button to turn off the fan, or press any other button to restore the display.

PRODUCT ASSEMBLY


Locate the buckle at the bottom of the filter cover. Press the buckle at the bottom of the filter cover and pull the lower edge toward you to release it. Lift the cover away from the unit.

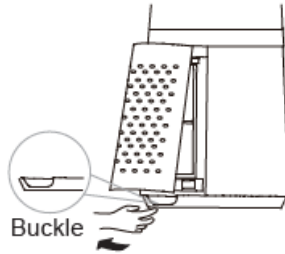

 
Locate the pre-filter inside the compartment. Hold the frame securely with both hands. Press the raised tabs on each side to release the lock, then pull the filter straight out from the unit.

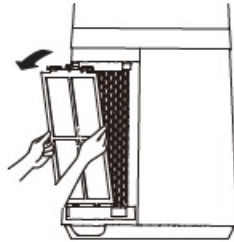

 
You will then need to remove the protective film off the filter.

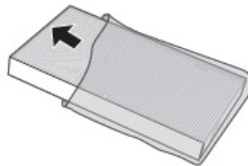

 
Once the protective film has been removed, you can then install the HEPA filter into the base of the unit.

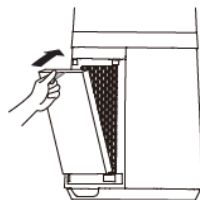

 
After the HEPA filter has been installed, please insert the pre-filter into the compartment. Align the six slots at the bottom of the frame. Push the top of the filter into place until the top clips lock securely.

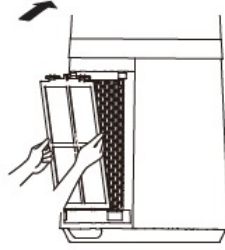

 To install the Filter Cover. Firstly, align the two upper clips with the slots and press firmly until they lock. Then, gently press both lower sides of the cover until it is fully secured.

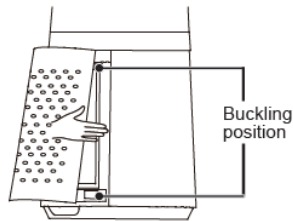

 
You will then need to install the adapter. Firstly, align the plug with the socket located at the base of the unit, then insert it fully and tighten until secure.

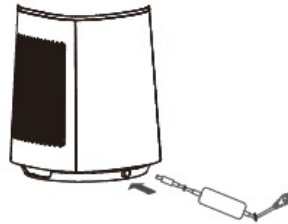

Finally, you can plug the power supply into a corresponding outlet.


Please Note: Clean the filter every two weeks and replace it every six months. Adjust the cleaning and replacement cycle based on the usage environment.

 OPERATING INSTRUCTIONS

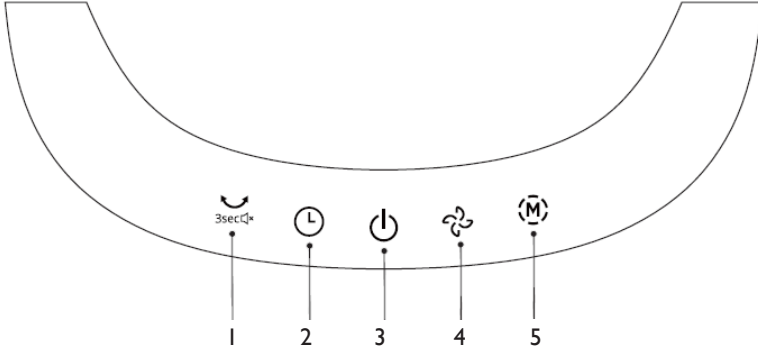

No.	Function	Description
1	Oscillation	Press this button to turn on/off the oscillation setting. If you press and hold this button for 3 seconds it will put it in "mute mode" this silences any sound when buttons are pressed.
2	Timer	Use this to set a timer for automatic shut-off (1–24 hours).
3	Power	Press this button to turn the unit on/off.
4	Speed	Press this button to adjust the wind speed between levels 1 and 10.
5	Mode	Press to cycle through wind modes: Normal > Sleep > Soft > Auto (Auto adjusts wind speed based on temperature).

 INTERFACE OVERVIEW

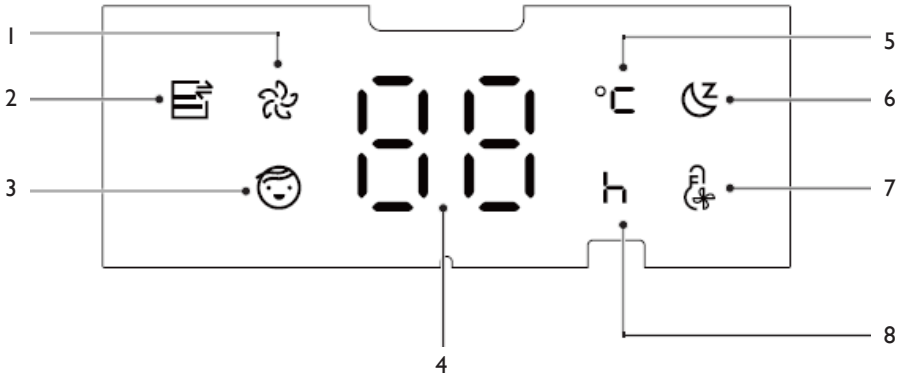








No.	Function	Description
1	Wind Mode	This light turns on when the unit is operating in Normal Wind mode.
2	Filter Replacement	When this icon remains illuminated, it indicates that the filter needs to be replaced.
3	Soft Wind Indicator	This light turns on when the unit is operating in Soft Wind mode. In this mode, the fan automatically adjusts the speed according to the program. There are two levels (1 and 2), and you can change the level by pressing the Wind Speed button.
4	Display Screen	Shows the current wind speed level or the set timer. In wind mode, it also displays the temperature.
5	Temperature Unit Indicator	This light appears next to the temperature display to show the selected unit ($^{\circ}\text{C}$ or $^{\circ}\text{F}$).
6	Sleep Mode Indicator	This light turns on when the unit is operating in Sleep Mode. In this mode, the fan automatically adjusts the speed according to the program. There are three levels (1, 2, and 3), and you can change the level by pressing the Wind Speed button.
7	Wind Indicator	This light turns on when the unit is operating in Intelligent Wind mode (wind speed adjusts automatically based on temperature). In Soft Wind and Auto modes, the light remains on, but this function is not active.
8	Timer Indicator Light	This light turns on when a timer is set and displays the selected duration.

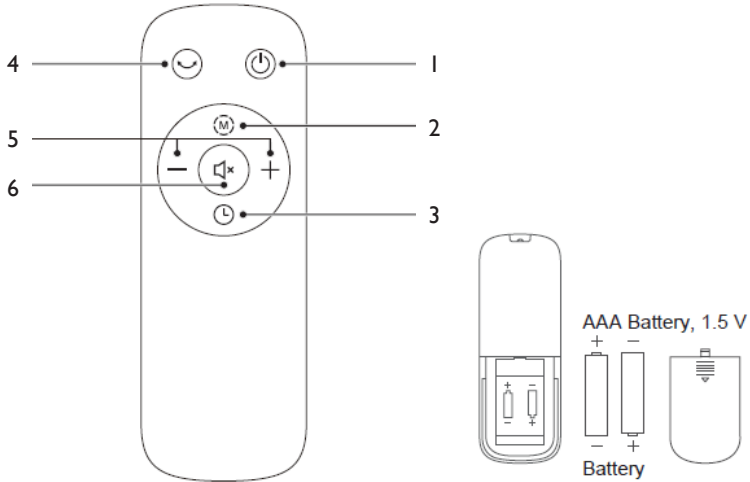 Remote Control

- Use the remote control from the front of the product within a 30° deviation angle for best performance.
- The battery contains heavy metals, acids, and bases that may pose health risks. Dispose of waste batteries through proper recycling channels.

Please Note: Batteries are not included with this product.



No.	Button	Description
1		Startup/Standby
2		Switch the wind type
3		Set the timed shutdown
4		Startup or shutdown oscillating
5		Press "+, -" to set the wind speed or timing time
6		Use this button to put the product in "mute mode", you can turn it on/off with this button.

Batteries Installation

Slide open the battery compartment cover. (Fig 1)

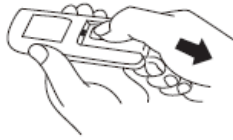 


Fig 1

Insert the batteries, ensuring they match the polarity shown in (Fig. 2)

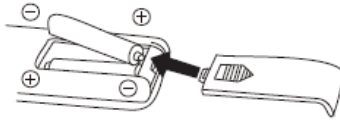 


Fig 2

Slide the battery cover back into place until secure. (Fig 3.)



Fig 3

Please Note: Use size AAA manganese or alkaline batteries. Do not use rechargeable batteries.

Battery Warning

 
1. Do not dispose of batteries in fire; they may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium).
4. Do not attempt to recharge non-rechargeable batteries.
5. Insert batteries with the correct polarity.
6. Remove exhausted batteries from the product promptly.
7. Remove batteries from the remote controller before disposal and ensure they are discarded safely.

CLEANING AND MAINTENANCE

When the filter replacement indicator light turns on, a prompt will appear reminding you to replace the filter. If the filter is not replaced, the prompt will appear each time the unit is powered on.



Replace the filter. Refer to the steps from product assembly.

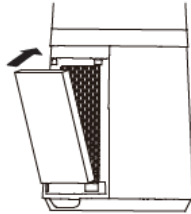


Once the filter has been replaced, Long press the Mode button for 3 seconds to turn off the filter replacement indicator light.




Pre-filter Cleaning

 Unplug the unit from power and take out the pre-filter.

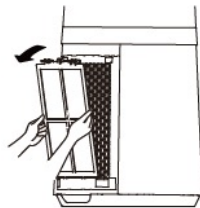

 Clean any dust with a brush or vacuum cleaner

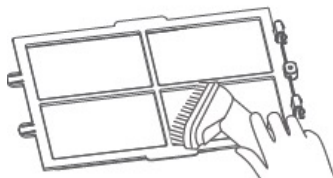

Refer to the installation guide to re-install the pre-filter. You will then be able to plug the unit back into the power supply.

Maintenance Instructions

The fan requires minimal maintenance.

- Do not attempt to repair it yourself. Contact qualified service personnel if service is needed.
- Always unplug the unit from the power supply before cleaning.
- Clean plastic parts with mild soap and a damp cloth or sponge. Rinse thoroughly with clean water to remove any soap residue.
- Do not allow water or any liquid to enter the motor housing.

TROUBLE SHOOTING GUIDE

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services on 01473 271272:

Problem	Possible Cause	Possible Solution
The unit is not working properly after installation	The power cable is disconnected or not securely connected	Check the power cable connection and ensure it was correctly connected
	The switch on the main body is turned off	Turn on the switch on the body
The remote is not working	The batteries need replacing	Replace the batteries
	The remote is being used more than 5m away from the fan	Use the remote closer to the fan and make sure it is pointing directly at the display panel.
Air flow has dropped	Air inlets are block or obstructed.	Remove any obstruction from the air intakes on the sides of the unit.
	Pre-filter or HEPA filter is clogged.	Clean the Pre-Filter and HEPA Filter.
No power	Fuse has blown.	Remove the fuse as per the mains fuse replacement instructions on page 16.
	Electrical Fault	Contact customer services.

SPECIFICATION TABLE

Supply	220-240V~50-60Hz
Motor Power	36W
Cable Length	2M
Noise	62dB
Off Power Consumption	0.2W

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class II)

Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.



DISPOSAL INFORMATION

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the Batch Code on the front of the instruction manual and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

igenix

UK: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.