

## 2kW Oscillating Fan Heater White



### IGHF0305 I W

**IMPORTANT: THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES AND OCCASIONAL USE.**

**Please read these instructions carefully before use and retain for future reference.  
Before switching on your appliance, always check for any damage which may have  
been caused in transit.**

# CONTENTS

Important Safety Instructions..... 3-4

Specification .....5

Technical Specification .....5

Appliance Overview .....6

Operating Instructions.....7

Cleaning and Maintenance .....8

Fuse Replacement .....9

Trouble Shooting Guide.....9

Disposal Information.....9

Terms and Conditions and Warranty Information..... 10-11

## IMPORTANT SAFETY INSTRUCTIONS

**Important:** Read and follow all of the instructions even if you feel you are familiar with the product and find a place to keep this manual handy for future reference.

- Ensure the unit is connected to an earthed power supply of the correct rating (refer to the rating label located on the unit).
- Do not cover or obstruct the unit's inlet and outlet grilles.
- This unit has been designed for household and indoor use only. Do not use the heater outdoors.
- This unit should only be used by adults.
- Cleaning and user maintenance should not be made by children.
- Keep the appliance and the cord out of reach of children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Always turn off the unit when it is not in use and remove the mains plug from the socket outlet, ensuring to pull the plug and not the cord.
- Do not use the unit in a wet room, such as a bathroom or laundry room or in areas where the unit is likely to get splashed.
- Always turn the unit off and remove the mains plug before cleaning, carrying out maintenance or moving location.
- Do not operate the unit with a damaged power cord or plug, after it malfunctions, has been dropped or damaged.
- Use of an extension cord is not recommended with this product.
- Keep the mains lead away from the hot body of the unit and always unroll the lead completely to avoid dangerous overheating.
- Ensure the unit is used on a flat even surface, positioned away from curtains, furniture or anything which could cause a fire hazard.
- The unit should not be located below a socket outlet.
- Do not insert any objects through the inlet and outlet grilles.

- Do not cover or obstruct any of the heat outlet grilles or air intake openings of the heater.
- It is not recommended to place the unit near flammable materials, substances or surfaces.
- It is not recommended to use flammable substances or vapours such as alcohol, insecticides, petrol, etc. whilst the unit is in use.
- The heater is not designed for use as the main form of heating.
- If the power cord of this appliance becomes damaged then it must be replaced by the manufacturer's service agent or a suitably qualified person using the same rated cable in order to avoid a hazard.
- Do not place the heater directly below a mains power cord.
- Do not twist or wrap the cord around the appliance as this may cause the cord to overheat.
- Do not place the heater on a carpet with a deep pile.
- Do not run the power cord under carpets or rugs.
- Arrange the power cord away from traffic so that it will not be tripped over.
- Use of an extension cord is not recommended with this appliance.
- Do not use the heater to dry clothes.
- Do not store the heater while it is still hot.

**WARNING:** The front grille gets hot during use.

# SPECIFICATION

Model:	IGHF03051W
Brand:	Igenix
Voltage:	220-240V
Frequency:	50-60Hz
Wattage	1800-2000W
Overheat Protection	Yes
Product Dimensions (mm):	H:293 x W:220 x D:183
Net Weight:	1.18kg

For further information about this product, including the power consumption in low power modes required by (EU) 2023/826, go to <https://www.igenix.co.uk/> and search for IGHF03051W.

Item	Symbol	Value	Unit
Heat output			
Nominal heat output	P <sub>nom</sub>	1.8-2.0	kW
Minimum heat output (indicative)	P <sub>min</sub>	2.0	kW
Maximum continuous heat output	P <sub>max,c</sub>	2.0	kW
Power consumption			
In off mode	P <sub>o</sub>	0.00	W
In standby mode	P <sub>sm</sub>	N/A	W
In idle mode	P <sub>idle</sub>	0.00	W
In network standby	P <sub>nsm</sub>	N/A	W
Standby mode with display of information or status			No
Seasonal space heating energy efficiency in active mode	ns-on	85,0	%

Item	Unit
Type of heat output/room temperature control (select one)	
single stage heat output and no room temperature control	No
Two or more manual stages, no room temperature control	No
with mechanic thermostat room temperature control	Yes
with electronic room temperature control	No
electronic room temperature control plus day timer	No
electronic room temperature control plus week timer	No
Other control options (multiple selections possible)	
room temperature control, with presence detection	No
room temperature control, with open window detection	No
with distance control option	No
with adaptive start control	No
with working time limitation	No
with black bulb sensor	No
self-learning functionality	No
control accuracy	No

# APPLIANCE OVERVIEW

**Fig. 1**



- 1. Temperature Control
- 2. Mode Selector Control
- 3. Power Indicator Light
- 4. Oscillation Switch
- 5. Tip Over Switch (underneath)

**Fig. 2**



**Fig. 3**




# OPERATING INSTRUCTIONS

Choose a suitable location for the heater ensuring you have taken account of the safety instructions.

**Please Note:** When the heater is turned on for the first time or after a period of non-use, it may emit a smell or fumes. This is normal and will disappear after a short time.

**Important:** Ensure the unit is switched off before plugging into the mains socket.

## Selecting Mode:

- Use the Mode Selector Control (Fig 3) to choose the required mode.
-  Setting (Fig 3) indicates the fan function only, this will produce no heat.
- I Setting (Fig 3) indicates the low heating function 1kW power.
- II Setting (Fig 3) indicates the high heating function 2kW power.
- 0 Setting (Fig 3) indicates off.

## Selecting Temperature:

- Gradually turn the Temperature Control (Fig 2) in a clockwise direction until the required temperature is reached.
- The Temperature Control can then be turned in either direction to decrease or increase the temperature.
- The thermostat can be adjusted between 0 - 40°C.

## Oscillation Function

- The unit is supplied with an oscillation function; this will allow air to be distributed over a larger area.
- To switch the oscillation function on, press the Oscillation Switch (Fig 1 [4]) to the 'on' position, to switch off repeat this function.

## Overheat Protection

- The unit is fitted with a safeguard that will automatically shut the power off should any part of the heater begin to overheat. Once the unit has cooled down it will automatically switch back on. Check that there is nothing surrounding the unit that may have caused it to overheat.

## Tip Over Switch

- The unit is fitted with a tip over switch, this will automatically shut the power off should the unit fall or be knocked over. To reset unit, stand upright on a flat even surface.

## **CLEANING AND MAINTENANCE**

- Ensure the heater is switched off and unplugged from the mains socket and allowed to cool down.
- Once cool wipe the exterior of the unit with a damp (not wet) clean cloth. It is not recommended to use detergents or abrasive materials as this may damage the housing.
- Do not allow water to enter the heater.
- To remove dust and debris for the grilles it is recommended that you use a vacuum cleaner.
- Ensure that the heater and plug are dry before plugging back into the mains socket.

### **Storing the Heater**


- When the unit is not in use for long periods of time it is recommended that the unit be placed back in the original box and stored out of reach of children.



# MAINS PLUG FUSE REPLACEMENT

## Fuse Replacement (Class II)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

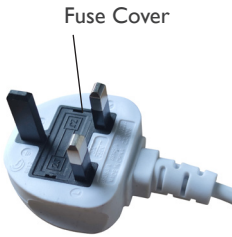

# TROUBLE SHOOTING

Please refer to the trouble shooting guide when experiencing an issue with your heater. If you still cannot determine the fault then please call our Customer Services number 01473 271272

Problem	Possible Cause	Solution
The heater does not work.	Not properly plugged into the mains wall socket.	Plug in firmly.
	Not switched on.	Confirm the unit is switched on.
	No electricity in the mains power socket.	Check the fuse or breaker.
The heater is getting too hot.	Inadequate air flow.	Ensure there is air circulating in the room.
	Temperature control set too high.	Adjust heat settings accordingly.
	Vents are blocked.	Ensure all vents are clear and free from obstruction.
The heater is not heating up.	Temperature control set too low.	Adjust the temperature control to a higher setting.
	The Mode selector is on the wrong mode.	Turn the Mode selector to II high mode.

# DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



## Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department  
38 Bluestem Road, Ransomes Europark  
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the rating label, and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



## **Thank you for choosing Igenix**

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **[www.igenix.co.uk](http://www.igenix.co.uk)**

# igenix

UK: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.  
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.  
All diagrams and images shown in this manual are for illustration purposes only.