

2.2kW Bi-Directional Oscillating Tower Fan Heater



IGHF08 | 20W

Please read these instructions carefully before use and retain for future reference.

Before switching on your appliance, always check for any damage which may have been caused in transit.

IMPORTANT: THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE

Issue (1) – 300626

CONTENTS

Important Safety Instructions.....	3 - 4
Specification	5 - 7
Appliance Overview	8
Operating Instructions.....	9 - 10
Cleaning and Maintenance	11
Trouble Shooting Guide.....	12
Fuse Replacement.....	13
Disposal and Recycling.....	13
Igenix Warranty	14 - 15

IMPORTANT SAFETY INSTRUCTIONS

The following basic precautions should always be followed when using this electrical appliance. Carefully read all instructions before operating and save for future reference:

- This appliance is intended for indoor use only.
- This appliance should not be used in corrosive gas or explosive gas surroundings (This includes dust, steam and gas).
- Do not operate this appliance in environments of high temperature, high humidity or any other particle surroundings.
- Please operate this appliance at the same voltage as displayed on the rating label.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance and understand the hazards that are involved.
- Avoid using the appliance on an uneven surface.
- Check the power cord for damage before first use. Do not bend or pull on the power cord to prevent causing damage.
- Please keep away from ignition sources and combustibles when using the appliance.
- Do not use this appliance near a bathtub, shower head, swimming pool or other vessels of water.
- Please ensure the appliance is turned off and unplugged if it is not being monitored.
- Do not put or hang anything over the appliance.
- To prevent damage and creating a hazard, do not insert any foreign objects into the openings of the appliance.
- Please do not pull the swing mechanism of this appliance forcefully, to avoid damaging the internal structure of it.
- Do not touch the plug or any other inner parts with wet hands.

- Do not clean the appliance by pouring water directly onto it.
- Please cut off the power to the appliance in the event it needs to be moved or cleaned.
- If the power cord is damaged, it must be replaced by qualified personnel to avoid creating a hazard and invalidating the warranty.
- Do not operate by means of an extension cord.



WARNING: Do not cover this appliance.

- Do not use this appliance to dry clothes.
- To protect against fire, electric shock or injury do not immerse the appliance, power cord or plug in water or any other liquid.
- Do not operate this appliance on carpeted surfaces.
- Do not twist, kink or wrap the cord around the appliance as this may cause the insulation to weaken and split.
- There are no user serviceable parts inside this appliance.
- Keep the power cord away from the body of the appliance when used in heat mode.
- Do not remove the plug from the mains power socket until the appliance has been switched off and never remove by pulling the power cord. Always grip the plug.
- Do not place this appliance directly below a mains socket.
- Do not run the power cord under carpeting, rugs or runners.
- Arrange the power cord away from trafficked areas so that it will not be tripped over.
- Do not store this appliance while it is still hot.
- Do not reach for the appliance if it has fallen into water. Switch off at the mains power socket and unplug immediately.
- Use this appliance only as described in the manual. Any other use is not recommended by the manufacturer and may cause fire electric shock or injury and will invalidate the warranty.

SPECIFICATION

Model:	IGHF08120W
Brand:	Igenix
Voltage:	220-240V~
Frequency:	50Hz
Wattage:	1400-2200W
Overheat Protection?	Yes
Tip Over Protection?	Yes
Product Dimensions (mm):	H:720 x W:213 x D:213
Net Weight:	3.5kg

TECHNICAL SPECIFICATION

Item	Symbol	Value	Unit
Heat Output			
Nominal Heat Output	P _{nom}	2.200	kW
Minimum Heat Output (indicative)	P _{min}	1.505	kW
Maximum Continuous Heat Output	P _{max, c}	2.159	kW
Power Consumption			
In Off Mode	P _o	0.00	W
In Standby Mode	P _{sm}	0.32	W
In Idle Mode	P _{idle}	0.35	W
In Network Standby	P _{nsm}	N/A	W
Standby mode with display of information or status			
Seasonal space heating energy efficiency in active mode	η _{s, on}	91.5	%

Item	Unit
Type of heat output/room temperature control (select one)	
Single stage heat output and no room temperature control	No
Two or more manual stages, no room temperature control	No
With mechanic thermostat room temperature control	No
With electronic room temperature control	Yes
Electronic room temperature control plus delay timer	No
Electronic room temperature control plus week timer	No
Other control options (multiple selections possible)	
Room temperature control, with presence detection	No
Room temperature control, with open window protection	No
Distance control option	No
Adaptive start control	No
Working time limitation	Yes
Black bulb sensor	No
Self-learning functionality	No
Control accuracy	No

APPLIANCE OVERVIEW



OPERATING INSTRUCTIONS

 
Before Use

1. Remove all packaging and inspect the appliance for any damages. It is recommended to keep all original packaging for the appliance, if the packaging is needed to be disposed of, please do so according to your local recycling regulations.
2. Before inserting the plug into an electrical outlet, ensure the electrical supply in your area matches that on the rating label.
3. When plugged in, ensure the main power switch at the base of the unit is turned on.
4. When in standby mode, only the ON/OFF on the control panel will respond to your touch. Press the ON/OFF button to access the rest of the control panel.



ON/OFF

Please press this button to turn the appliance ON/OFF.

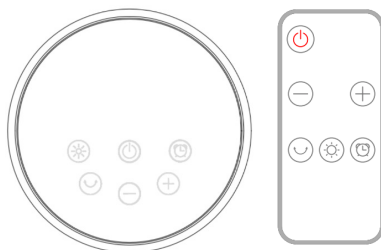

Please Note: Once the OFF button has been pressed, the appliance will turn off after 30 seconds. This allows for the heating elements to be cooled efficiently. Do not unplug this appliance before it has turned off.

Heat Control

Low Power: Press this button once.

High Power: Press this button twice.

Fan: When the appliance is first turned on, this will be the default setting. Press this button three times to cycle back to fan.

Temperature Adjustment

Press the “+” button to increase the temperature.

Press the “-” button to decrease the temperature.

The temperature can be set between 10°C and 35°C.

Please Note: When the room temperature reaches 3°C higher or lower than the temperature the appliance has been set to, the heater will cut off or turn on heating.

Timer

Press this button to set a timer between 0 and 12 hours. To increase the time, continuously press the button until the desired time is reached.

Oscillation

Press this button to turn on/off the oscillation.

Remote Control

 
1. Install a lithium coin battery (not included).
2. All functions available on the remote operate in the same way as the control panel on the appliance.

Overheat Protection

This heater has an overheat protection feature that automatically switches the appliance off if it becomes too hot—for example, if the air vents are fully or partially blocked. If this happens, unplug the heater and allow it to cool for about 30 minutes. Remove anything that may be blocking the vents, then switch the heater back on as previously described. It should operate normally. If the issue continues, please contact the customer service department.

Battery (Not Included)

The remote control requires one CR2025, 3V, coin battery.

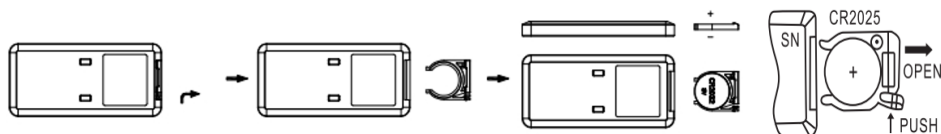

Please Note: Please follow the disposal instructions on the packaging of the battery when the battery has reached end of life or contact your local council for guidance on how to dispose of the battery safely.

Safety Advice

- In the event of abnormal overheating, the appliance is equipped with a safety device that will automatically switch it off. After a brief cooling period, the appliance will be ready for use again.
- If the same fault occurs after cooling, disconnect the appliance from the mains and contact your authorised dealer or after sales service department.
- During operation, do not touch or cover the air outlet. Obstruction of the outlet may cause the appliance to overheat and activate the safety device.
- The appliance is also fitted with a tip over switch. Do not operate the heater on thick or long pile carpets, as the switch may not function correctly and the heater may fail to operate.

CLEANING AND MAINTENANCE

IMPORTANT: Please ensure the appliance has been turned off and unplugged from the electrical supply before undertaking any cleaning and/or maintenance.

- Clean the housing with a slightly dampened cloth, a vacuum or dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in liquid or pour any liquids directly onto it.
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for a long period of time, it must be protected against excessive dirt and dust. Please dismount the heater and store in a dry place away from direct sunlight and dirt.
- Always unplug the appliance when it is not in use.
- Ensure the appliance has completely cooled down before storing.
- Ensure both the heater and the plug are completely dry before operating after undertaking any cleaning.

TROUBLE SHOOTING GUIDE


If you are having problems with your appliance, please use our troubleshooting guide below. If you are unable to resolve the issue using this guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Problem	Possible Cause	Solution
The appliance does not work.	Not properly plugged into the mains power socket.	Plug in firmly.
	Not switched on.	Make sure the appliance is switched on.
	No electricity in the mains power socket.	Check fuse or breaker and replace if necessary.
The appliance is getting too hot.	Inadequate airflow.	Ensure there is circulating air in the room.
	Heat settings are too high.	Adjust the heat setting accordingly.
	Vents are blocked.	Ensure all vents are clear and free from obstruction.
The remote is not working.	Batteries are not inserted properly.	Check to ensure they are inserted properly.
	The batteries are dead.	Insert new batteries.
	Too far away from the appliance.	Move closer to the appliance.

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class II)

 This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

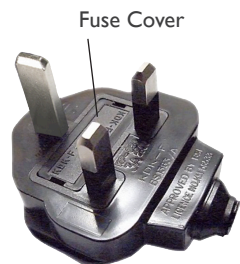

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the rating label, and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

igenix

38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR
Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR
Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.