 


20L 700W Manual Microwave

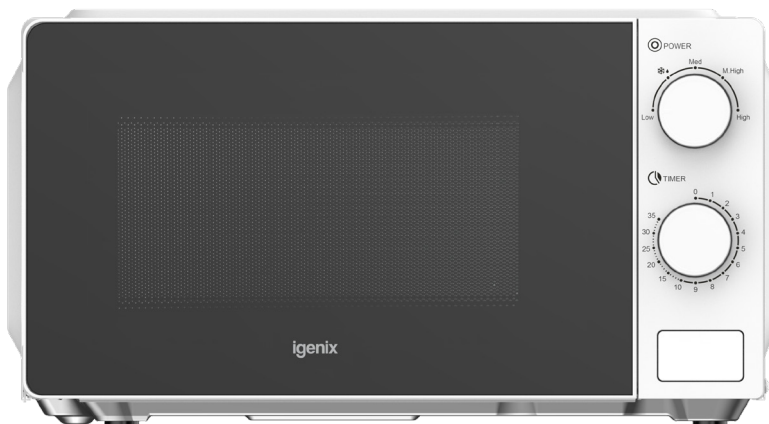

IGMS0207 I W/B

Please read these instructions carefully before use and retain for future reference.

**Before switching on your appliance,
always check for any damage which may have been caused in transit.**

CONTENTS

Important Safety Instructions.....3-6

Specification7

Appliance Overview8-9

Installation..... 10

Operating Instructions..... 11

Container Guidelines 12

Cooking Tips 13

Cleaning & Maintenance 14

Trouble Shooting Guide..... 15-16

Fuse Replacement 17

Disposal Information..... 17

Terms and Conditions and Warranty Information..... 18-19

IMPORTANT SAFETY INSTRUCTIONS

The following basic precautions should always be followed when using this electrical appliance. Carefully read all instructions before operating and save for future reference:

- This appliance is for domestic use only.
- Make sure the voltage in the intended location corresponds to the one shown on the rating label of the appliance.
- To reduce the risk of fire in the microwave cavity ensure the following:
 - Do not cook the food for longer than recommended.
 - Remove wire twist-ties before placing bags in the microwave.
 - Do not heat oil or fat for deep frying as the temperature of the oil cannot be controlled.
 - After use wipe the waveguide cover with a damp cloth, followed by a dry cloth to remove any food splashes and grease. Built-up grease may overheat and begin to cause smoke or catch fire.
 - If materials inside the microwave should smoke or ignite, keep the microwave door closed, turn the microwave off at the wall socket and disconnect the plug from the wall socket.
 - When heating food in plastic containers, do not leave unattended due to the possibility of ignition.



WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode; baby bottles fitted with a screw cap or teat are considered sealed containers.

To reduce the risk of explosion and sudden boiling:

- Use a wide-mouthed container to cook liquids and ensure the cooked liquid is allowed to stand and is not removed immediately - this is to avoid possible hazards such as explosions caused by delayed boiling of liquids.
- Potatoes, sausages and chestnuts should be peeled or pierced before cooking.
- Eggs in their shell should not be heated in microwaves since they may explode, even after microwave heating has ended.
- The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature should be checked before consumption, in order to avoid burns from uneven heating.
- If the supply cord is damaged, it must be replaced before further use by the manufacturer, a service agent or a qualified electrician in order to avoid a hazard.
- After cooking, the container will be very hot. Use sufficient protection such as an oven glove to remove the food and avoid steam burns by directing steam away from the face and hands.
- Slowly lift the furthest edge of dish covers and microwave plastic wrap and carefully open popcorn and microwave cooking bags away from the face to avoid risk of burns from escaping steam.
- To prevent the turntable from breaking:
 - Let the turntable cool down before cleaning.
 - Do not place hot foods or containers on the cold turntable.
 - Do not place frozen foods or containers on the hot turntable.
- Make sure containers do not touch the interior walls during

cooking.

- Only use containers that are marked as “microwave safe”.
- Do not store food or any other object inside the microwave.
- Do not operate the microwave without any liquid or food inside the microwave. This could damage the microwave.
- Any accessories not recommended by the manufacturer may cause injuries.
- Do not use outdoors.



WARNING: If the door or door seals are damaged or the microwave has malfunctioned, the microwave must not be operated until it has been repaired by a qualified electrician.



WARNING: It is hazardous for anyone other than a qualified electrician to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

- If smoke is emitted, switch off and then unplug the appliance and keep the door closed in order to contain any flames.
- Microwave heating of beverages can result in delayed boiling and the possibility of overflowing; Therefore, care must be taken when handling the container.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the microwave door glass since they can scratch the surface, which may result in shattering of the glass.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This microwave oven is intended for heating food and beverages.

- Drying of food or clothing and heating of warming pads, slippers, sponges or similar may lead to risk of injury, ignition or fire.
- This appliance should only be used by adults.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children.
- Keep the appliance and its cord out of reach of children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- A steam cleaner is not to be used on any part of this product.
- The door or the outer surface may get hot when the appliance is operating.



WARNING: Accessible parts may become hot during use. Young children should be kept away. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the microwave.



CAUTION: Hot surface

- The internal LED light source on is <60lm.


SPECIFICATION

Model:	IGMS0207IW / IGMS0207IB
Voltage/Frequency:	220-240V~50Hz
Rated Input Power (Microwave):	1100W
Rated Output Power (Microwave):	700W
Oven Capacity:	20L
Turntable Diameter:	245mm
Product Dimensions (mm):	H:246 x W:444 x D:320
Cavity Dimensions (mm):	H:207 x W:313 x D:310
Net Weight:	9.7kg
Power Consumption in Off-mode:	<0.3W


For further information about this product, including the power consumption in low power modes required by (EU) 2023/826, go to <https://www.igenix.co.uk> and search for IGMS0207IW or IGMS0207IB.

APPLIANCE OVERVIEW

 1. Door lock – Microwave door must be properly closed in order for it to operate.
2. Viewing window – Allows user to use the cooking status
3. Rotating ring – The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating.
4. Rotating axis – The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate.
5. Turntable – The food sits on the turntable, its rotation during operation helps to cook food evenly.
 - Place the rotating ring in the microwave first.
 - Fit the turntable onto the rotating axis and make sure that it is located over the gear mechanism.
6. Push button

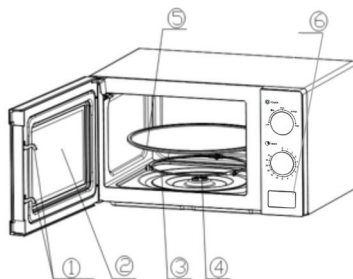

 WARNING: Never remove the waveguide cover located inside the microwave.

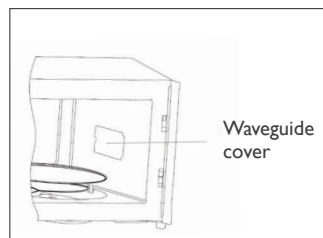


CONTROL PANEL

Power/Function Dial

There are 5 power levels and a defrost setting:

High (H)	100% power output	Quick cooking
Medium High (M.H)	80% power output	Normal cooking
Medium (M)	55% power output	Slow cooking
Defrost (D)	30% power output	Defrost
Low (L)	17% power output	Keep warm

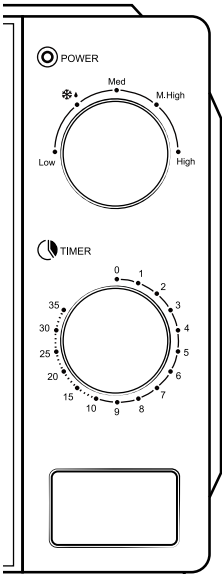 

Timer Dial

- The max cooking time length that can be set is 35 minutes.
- Each setting increment is 1 minute.
- A bell will be heard when the timer times out and returns to zero position.

The following table provides a reference defrost time length based on the weights of the food:

Weight (g)	Defrost Time
200g	about 4 minutes
400g	about 8 minutes
600g	about 12 minutes

INSTALLATION

1. Remove all packaging. Check carefully for damage. If any damage is evident, immediately notify the service centre.
2. On the inside of the microwave door, locate the stickers and remove the protective film they are attached to.
3. Microwave ovens must be placed in dry and non-corrosive environments and kept away from heat and humidity, such as gas burners or water tanks.
4. To ensure sufficient ventilation, the distance from the back of the microwave to the wall should be at least 10cm, the side to the wall should be at least 5cm, the free distance above the top surface at least 20cm and the distance from the microwave to the ground should be at least 85cm.
5. The position of the microwave should be such that it is located at least 5m from any TVs, Radios or antenna as this can cause interference.
6. The appliance must be positioned so that the plug is accessible and must ensure a good grounding in case of leakage.
7. The microwave must be operated with the door closed.
8. The microwave must not be placed in a cabinet. The microwave is intended to be freestanding.
9. As there could be manufacturing residue or oil remaining in the microwave cavity or on the heating element, it is normal for there to be an odour or slight smoke upon initial use. This should not occur after the microwave has been used several times. Keep the door and windows open to ensure good ventilation. It is strongly recommended to place a cup of water on the turntable, set the microwave to high power and operate for 2-3 minutes to reduce the risk of residual odour before cooking food and beverages for the first time, repeating several times if necessary.

OPERATING INSTRUCTIONS

Plug the power cord into the wall socket. Before connecting the cord, make sure the timer is set to the “0” position. Do not block or cover the ventilation outlets at the rear or bottom of the microwave.

- Place the food in a container and onto the glass turntable and close the door.
- Select the desired power level by turning the power control knob.
- Set the desired cooking time by turning the timer control knob.
- Once the desired time is set, cooking will begin. If pausing is required whilst cooking, the door can be opened at any time. To do this, open the door using the push button. To resume cooking, close the door.
- When the timer ends and cooking is finished, the microwave will sound a bell, and the interior light will automatically turn off.
- If the desired cooking level is reached and food is removed before the timer finishes, ensure that the timer is set back to the “0” position to avoid the microwave operating whilst empty when the door is closed again.

CONTAINER GUIDELINES

It is strongly recommended to use containers which are marked as microwave safe. Generally speaking containers which are made of heat-resistant ceramic, glass or plastic are suitable for microwave cooking. Never use metal containers for microwave cooking as sparking is likely to occur. Use the below table for reference:

Container Material	Microwave	Notes
Heat-resistant ceramic	Yes	Never use ceramics which are decorated with metal or glazed.
Heat-resistant plastic	Yes	Do not leave unattended due to the possibility of ignition.
Heat-resistant glass	Yes	Never use glass with metal parts.
Plastic film	Yes	Should not be used when cooking meat as the over-temperature may do damage to the film.
Grill rack	No	Should not be used in microwave. Microwave cannot penetrate through metal.
Metal container	No	Should not be used in microwave. Microwave cannot penetrate through metal.
Lacquer	No	Poor heat-resistance. Cannot be used for high-temperature cooking.
Bamboo wood and paper	No	Poor heat-resistance. Cannot be used for high-temperature cooking.

COOKING TIPS

The following factors may affect the cooking result:

Food arrangement

Place thicker areas towards the outside of the dish and the thinner part towards the centre and spread evenly. Do not overlap if possible.

Cooking time

Start cooking with a short time setting, evaluate it after it times out and extend it according to the actual need. Over cooking may result in smoke and burns.

Cooking food evenly

Food such as chicken, hamburgers or steak should be turned at least once during cooking. Depending on the type of food, if applicable remove it and stir it from outside to centre of the dish once or twice during cooking.

Allow standing time

After timer is finished, leave the food in the microwave for an adequate length of time, this allows it to complete its cooking cycle and begin cooling down in a gradual manner.

Microwave safe plastic wrap

When cooking food with high fat content, do not allow the plastic wrap to come into contact with food as it may melt.

Microwave safe plastic cookware

Some microwave safe plastic cookware might not be suitable for cooking foods with high fat and sugar content. The preheating time specified in the cooking instructions of each food/beverage must not be exceeded.

CLEANING & MAINTENANCE

Microwave Oven Care



CAUTION: The microwave should be cleaned regularly and any food deposits removed.



WARNING: Turn off the power at the wall socket and remove the plug from the socket before cleaning. Do not immerse any part of the appliance in water or other fluids when cleaning except the removable glass turntable and rotating ring.

- Failure to maintain the microwave in a clean condition could lead to deterioration of the surfaces which could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Never use strong detergent, gasoline, abrasive powder or a metal brush to clean any part of the appliance.
- Do not remove the waveguide cover located inside the cavity of the microwave.

Tips for Cleaning

Details for cleaning door seals, cavity and adjacent parts:

Exterior:

- Wipe clean the enclosure with a damp soft cloth.

Door:

- Wipe clean the door and window with a damp soft cloth.
- Wipe the door seals and adjacent parts to remove any spill or spatter.
- Wipe the control panel with a slightly damp soft cloth.

Interior walls:

- Wipe clean the cavity with a damp soft cloth.
- Wipe clean the waveguide cover to remove any food splashed.

Turntable/ Rotation ring/ Rotation axis:

- Remove and wash with mild soapy water.
- Rinse with clean water and allow to dry thoroughly before replacing.

TROUBLE SHOOTING GUIDE

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services on 01473 271272:

To test microwave is working before cooking food – **DO NOT OPERATE EMPTY**, instead place one cup of water (approx. 150ml) in a glass in the microwave and close the door securely. Microwave lamp should go off if the door is closed properly. Let the microwave work on full power for 1 min.

Fault	Possible Cause	Solution
The microwave does not work.	Not properly plugged into the mains wall socket.	Plug in firmly.
	Not switched on.	Make sure appliance is switched on.
	No electricity in the mains wall socket.	Check fuse.
	Door not shut properly.	Ensure nothing is blocking the door (if food container is too large, use smaller container).
Food is not cooked.	Time or power setting is not correct for required food/beverage.	Ensure cooking instructions from packaging are followed and appropriate setting and time is selected.
	Door is not closed.	Ensure door is fully closed.
Food is over or undercooked.	Time or power setting is not correct for required food/beverage.	Ensure cooking instructions from packaging are followed and appropriate setting and time is selected.
Sparkling or noises inside the microwave.	Container used is made of metal components or unsuitable material for microwaving.	Ensure any container used adheres to guidelines in the manual.
	Metal utensil has been left in container.	Ensure no metal utensils are left in containers.
Cooling fan is not working.	Air flow to vents is blocked.	Ensure nothing is blocking the air vents and that the microwave is situated as per the installation instructions.
Turntable is not rotating.	Door is not properly closed.	Ensure door is properly closed.
	Container is touching the walls and preventing turntable from rotating.	Ensure container is not touching the walls (if food container is too large, use smaller container).

CAUTION HIGH VOLTAGE WARNING



This appliance is equipped with an earthed plug for your protection against possible shock hazards and should be connected to a properly earthed power socket.

Do not operate this oven if the door is bent, warped or otherwise damaged and does not close firmly.

Do not tamper with the door safety interlocks.

 
This device is to be serviced only by a qualified electrician.

Disconnect the plug from the mains before servicing.

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

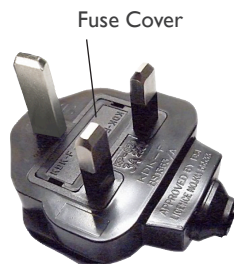

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' and the PO Number on the rating label, and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**



UK: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

EU: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.