

## 1500W 4 Slice Toaster Stainless Steel



# IGT0409SS

**Please read these instructions carefully before use and retain for future reference.**

**Before switching on your appliance,  
always check for any damage which may have been caused in transit.**

# CONTENTS

Important Safety Instructions.....	3-5
Specification .....	6
Appliance Overview .....	7
Operating Instructions.....	8-9
Toasting Tips .....	10
Cleaning and Maintenance .....	11
Troubleshooting Guide .....	12
Fuse Replacement .....	13
Disposal Information.....	13
Igenix Warranty Terms & Conditions.....	14-15

## IMPORTANT SAFETY INSTRUCTIONS

The following basic precautions should always be followed when using this electrical appliance. Carefully read all instructions before operating and save for future reference:

- This appliance is intended for indoor domestic use only. It may be used in similar settings such as:
  - a. Staff kitchen areas in shops, offices and other working environments
  - b. By clients in hotels, motels and other residential type environments
  - c. Bed and breakfast type environments
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance has malfunctioned, been dropped or otherwise damaged.
- All electrical repairs must be carried out by a qualified electrician. Improper repairs can pose a serious safety risk and void the warranty.
- Make sure the voltage in your home corresponds to the one shown on the rating label of the appliance.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be conducted by children.
- Keep the appliance and its cord away from children aged 8 years and below.
- Children shall not play with the appliance.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Do not let the cord hang over the edge of a table or counter or come into contact with hot surfaces.
- Do not place the appliance on or near hot gas or electric burners, or inside a heated oven.
- Ensure that the toaster is placed on a level, flat and stable surface out of reach of children to prevent tipping and potential damage or injury.
- To avoid the risk of fire or electric shock, do not immerse the cord, the plug, or the appliance in water or any other liquid.
- The use of accessories, which are not recommended by the manufacturer, may result in fire, electric shock or personal injury.
- Unplug the appliance when not in use and before cleaning. Allow the appliance to cool completely before cleaning.
- Do not use the toaster for anything other than its intended purpose.
- Do not cover the toaster or place objects on top of it during or after use. A fire may be caused if the toaster is being covered or is touching flammable materials such as curtains, tea towels or paper towels etc.
- Do not store any flammable items on or near the toaster.
- Do not leave the toaster unattended while in operation.
- The metal surfaces and slots of the toaster will become hot during and after use. Do not touch these areas and allow the toaster to cool down.
- If bread becomes jammed in the slots, unplug the toaster and allow it to cool down before attempting to remove the bread.
- Remove the bread carefully. Do not use sharp objects such as knives or forks as they may damage heating elements in the toaster and pose a risk of electric shock.
- Do not toast oversized, torn or irregularly shaped pieces of bread as they may jam the toaster.
- Do not move or clean the toaster until it has fully cooled down.

- Always use the toaster with the crumb tray securely fitted. Clean the crumb tray regularly to prevent build-up of crumbs, which may present a fire hazard.
- Do not operate the toaster using an external timer or remote-control system.
- Never insert oversized food items, metal foil and utensils into the toaster as it may cause fire or electric shock
- Do not remove bread from the slots while the toaster is in operation.

## SPECIFICATION

Model:	IGT0409SS
Power	1500W
Voltage/Frequency:	220-240V~50-60Hz
Settings:	7 Browning Levels
Product Dimensions (mm):	H:180 x W:277 x D:266
Net Weight:	1.9kg
Number of Slots:	4
Bread Slot Depth:	120mm x 120mm
Power Consumption in Off-mode	<0.1W

For further information about this product, including the power consumption in low power modes required by (EU) 2023/826, go to <https://www.igenix.co.uk> and search for IGT0409SS.

# APPLIANCE OVERVIEW



1. Bread Slots
2. Carriage Lever
3. Browning Control Dial
4. Defrost Button
5. Reheat Button
6. Cancel Button
7. Removable Crumb Tray

## Before First Use

It is normal for the toaster to produce a slight odour during initial use as the protective coatings burn off. It will dissipate after a few times. To minimize any smell, it is strongly recommended that you operate the toaster a few times without bread before first use. Follow the instructions below and make sure you are in a well-ventilated area while doing so.

## OPERATING INSTRUCTIONS

**Please Note:** Ensure the crumb tray is securely positioned before using the toaster.

1. Place the toaster on a flat, stable and heat-resistant surface. Make sure it is not in contact with or placed near items that could be damaged by heat.
2. Plug the toaster into the mains power outlet and switch it on.
3. Turn the browning control dial to select your desired browning level. There are a total of 7 browning levels. A golden colour is typically achieved at level 3 or 4. However, this may vary depending on the type and thickness of the bread.

**Please Note:** The browning level should only be selected before toasting. Please do not adjust the browning level once toasting has started.

4. Place a maximum of 4 slices of bread into the toasting slots and press the carriage lever down until it is secured in place to begin toasting. The "CANCEL" button will illuminate once toasting begins. The carriage lever will automatically spring up once toasting is completed or if you press the "CANCEL" button, allowing you to safely remove the toast from the toaster.

**Please Note:** It is normal for one side of the toast to appear darker than the other. When the toaster is being used continuously, subsequent toasts may become darker than previous slices even at the same browning level.

**Please Note:** The lever will not stay down unless the toaster is connected to the mains power supply.

**Please Note:** The toasting cycle can be stopped at any time by pressing the "CANCEL" button.

### Defrosting Frozen Bread

This function allows you to defrost and toast frozen bread easily as the toasting time is automatically adjusted to achieve the same level of browning as with room-temperature bread.

1. Take the bread out from the refrigerator and place it into the toasting slots.
2. Turn the browning control dial to your usual setting, as you would for an unfrozen, room-temperature slice of bread.

3. Press the carriage lever down until it stays down securely in place and press the “DEFROST” button. The indicator light will illuminate to show that the toaster is under defrost function, and the toasting time has been automatically adjusted for frozen bread. The carriage lever will automatically spring up once toasting is completed, allowing you to safely remove the toasts from the toaster.



**WARNING:** Never defrost frozen bread under low heat settings and browning levels as this may cause water and moisture to drip into the toaster. Using higher settings and browning levels will allow the ice to convert into steam, which escapes naturally through the slots.

## Reheating Toast

This function allows you to reheat previously toasted bread by applying a short burst of heat.

1. Leave the browning control dial at your usual setting.
2. Place the bread slices into the toasting slots.
3. Press the carriage lever down until it stays down securely in place and press the “REHEAT” button. The indicator light will light up to show that the toaster is under reheat function. The reheat cycle has a fixed toasting time. The carriage lever will automatically spring up once toasting is completed, allowing you to safely remove the toasts from the toaster.

**Please Note:** Only unbuttered toast should be reheated. Do not reheat toast that has been spread with butter, jam, or any other toppings.

## TOASTING TIPS

- Remove all protective wrappings before toasting.
- If the toaster starts to emit smoke, press the “CANCEL” button to stop toasting immediately.
- Do not toast breads with runny toppings or ingredients, such as butter, jam and honey.
- Never attempt to remove jammed bread from the slots without first unplugging the toaster from the mains power supply. Make sure not to damage the internal mechanism or heating elements when removing jammed bread.
- To achieve more consistent browning results, wait at least 30 seconds between toasting cycles to allow the browning control can reset automatically.
- When toasting more than one slice of bread, use bread that is similar size, thickness and freshness to achieve similar results. Older or thinner bread will toast faster than fresh or thicker ones, so a lower browning level may need to be selected. Older bread also contains less moisture which makes it better for toasting. Sweet breads, such as tea cakes and fruit loaf also toast faster than regular bread. Make sure you use a lower browning level when toasting these types of breads.

## **CLEANING AND MAINTENANCE**

- Always unplug the toaster and allow it to cool down completely before cleaning and storing.
- Wipe clean the body of the toaster with a soft damp cloth.
- Remove the crumb tray located at the bottom of the toaster and empty any crumbs. If the toaster is being used frequently, clean the crumb tray at least once a week. Always ensure that the crumb tray is securely fitted before using the toaster again.
- Do not insert any objects into the toasting slots as this may damage the heating elements.
- Do not immerse the toaster in water or any other liquids.
- Do not use harsh or abrasive cleaning pads or agents as they may damage the body or heating elements of the toaster.

## TROUBLE SHOOTING GUIDE


If you are having problems with your toaster, please use our troubleshooting guide below. If you are unable to resolve the issue using the guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Problem	Possible Cause	Possible Solution
The toaster does not work.	Not properly plugged into the power socket.	Plug in firmly.
	No electricity in the mains power supply.	Check fuse or breaker.
The toaster smokes when it is used.	The protective film is burning off the elements.	This is perfectly normal and will stop with use.
	Crumb tray is full and needs emptying.	Empty the crumb tray regularly.
The toaster carriage lever won't stay down.	The toaster is not plugged into the mains power supply.	Plug the toaster into power socket and switch on.
The toaster is not browning the toast enough.	The browning control is set too low.	Turn up the browning control to a higher number.
	The bread you are using is fresh and therefore contains more moisture.	Turn up the browning control as fresh bread takes longer to toast than bread that is 1 or 2 days old.
The toaster is burning the bread.	The browning control is set too high.	Turn the browning control to a lower setting.

## MAINS PLUG FUSE REPLACEMENT

### Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

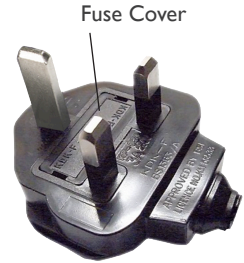

## DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





## Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department  
38 Bluestem Road, Ransomes Europark  
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the "PO Number" that can be found on the rating label on the bottom of the product on the front of the instruction manual and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



## **Thank you for choosing Igenix**

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **[www.igenix.co.uk](http://www.igenix.co.uk)**

To register your product, visit the Igenix website and complete the online form.

# **igenix**

**UK: 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR**

**EU: Castle Electrical Factors Ltd, Dundalk, A91 KA9R, IR**

**Tel. 01473 271 272**

Disclaimer: Igenix operate a policy of continual improvement and development.  
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.  
All diagrams and images shown in this manual are for illustration purposes only.