


12" Digital Mini Tower Fan

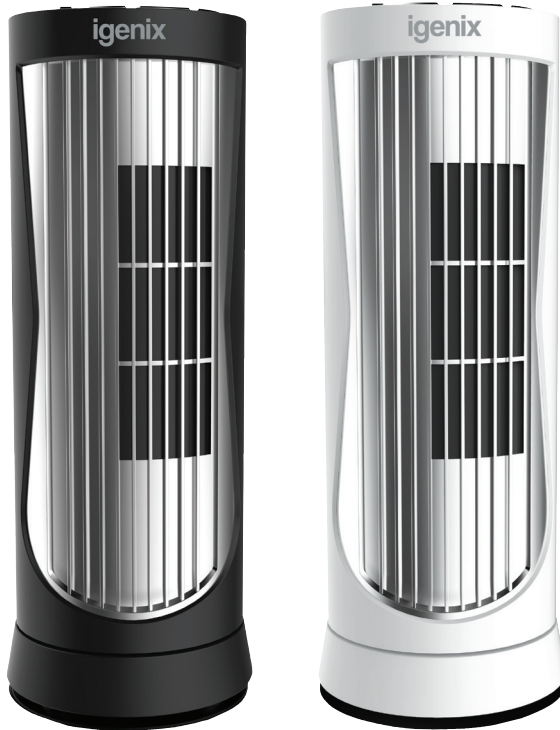

For models:

DF0022 - Black & Silver
DF0022WH - White & Silver

Batch code:

Please read these instructions carefully before use and retain for future reference

**Before switching on your appliance,
always check for any damage which may have been caused in transit**

CONTENTS

Safety Instructions.....	2-3
Appliance Overview.....	3-4
Operating Instructions.....	4
Cleaning and Storage.....	4
Fuse Replacement.....	4
Trouble Shooting Guide.....	5
Disclaimer.....	5
Disposal information.....	5
Igenix Warranty.....	6-7


SAFETY INSTRUCTIONS

Please read this user manual carefully to ensure proper use, maintenance and installation.


1. This product is intended for domestic and light office use **ONLY** and not for commercial, industrial or outdoor use.
2. Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way.
3. All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
4. Make sure the voltage in your home corresponds to the one shown on the rating label of the appliance
5. This unit should always be kept in an upright position especially during operation to avoid any damage. Locate the unit on a flat stable surface.
6. Position the power cord where people will not step on or trip over it.
7. Ensure that the air inlets and outlets are not blocked or covered.
8. Do not place the unit too close to curtains or other objects - min 30cm.
9. Make sure there are no objects near the unit which can prevent it from oscillating.

10. Never insert fingers, pencils or other objects into the unit.
Warn your children against these dangers.
11. This appliance should only be used by adults.
12. Keep the appliance and its cord out of reach of children.
13. Children shall not play with the appliance.
14. Cleaning and user maintenance shall not be made by children.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
16. Unplug the unit from the socket when not in use. Do not pull on the cord.
17. Do not use the unit near a bath, shower, swimming pool or anywhere it could be splashed with water.
18. Do not expose the unit to direct sunlight.
19. Do not use the unit near flammable or explosive gases.
20. Before cleaning or moving the unit, switch it off and unplug the power cord.
21. Do not leave the unit unattended during operation.
Always unplug the power cord when not in use.

APPLIANCE OVERVIEW

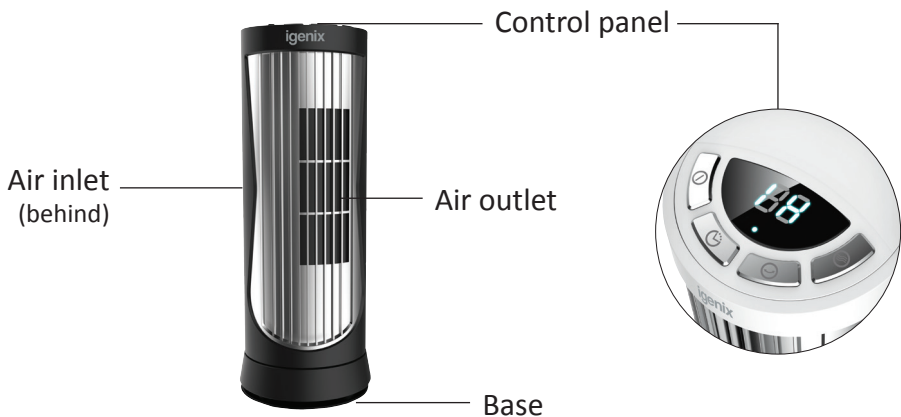

Control Panel

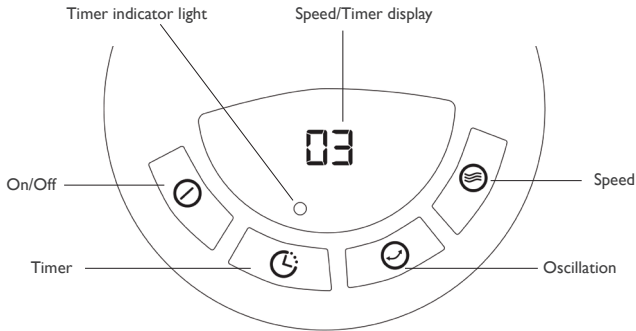

OPERATING INSTRUCTIONS

On/Off

This will turn the appliance on and off.

Timer

The timer can be set for 1 to 8 hours at 1 hour increments. An indicator light will show above the button to display that the timer is set.

Oscillation

The oscillation button allows the fan to be set to oscillate or the oscillation function to be turned off.

Speed

There are 3 speeds:

- 1- Low Speed
- 2- Medium Speed
- 3- High Speed

CLEANING AND STORAGE

- Before cleaning the unit, turn the power off by selecting the O position and unplug the power cord from the plug socket. Wait until the fan has stopped running completely before cleaning.
- Important: Do not immerse the power cord, plug or the whole unit in water or rinse under a tap.
- Clean the outside of the unit using a damp cloth moistened with a mild soap solution, and then wipe it using a dry cloth.
- Dust can be cleaned from the air inlet and air outlet by using a soft brush
- We recommend cleaning the unit once a month.
- If you don't use the unit for a long period of time, please turn the unit off, unplug the power cord from the socket and then store in a dry, cool and safe place.

MAINS PLUG FUSE REPLACEMENT

Fuse Replacement (Class II)

Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.



TROUBLE SHOOTING GUIDE

Problem	Possible Cause	Solution
The fan does not work	<ol style="list-style-type: none">1. Not properly plugged into the mains wall socket2. Not switched on3. No electricity in the mains wall socket	<ol style="list-style-type: none">1. Plug in firmly2. Switch on3. Check fuse or breaker
The fan is too noisy	<ol style="list-style-type: none">1. Sitting unevenly2. Not secured together correctly	<ol style="list-style-type: none">1. Ensure fan is sitting on flat surface2. Make sure all components are secured correctly
The air speed is too fast	<ol style="list-style-type: none">1. Fan setting is too high	<ol style="list-style-type: none">1. Adjust setting accordingly

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the "Batch code" on the front of the instruction manual and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

To register your product, visit the Igenix website and complete the online form.

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.

igenix

38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR
Tel. 01473 271 272