

## **Tower Air Circulator Fan**



**DF0050 - White**  
**DF0050BL - Black**

Batch code:

**Please read these instructions carefully before use and retain for future reference**

**Before switching on your appliance,  
always check for any damage which may have been caused in transit**

## CONTENTS

Important Safety Instructions.....	2-3
Specification .....	3
Appliance Overview .....	4
Control Panel.....	4
Operating Instructions.....	5-6
Cleaning and Maintenance .....	6
Fuse Replacement .....	6
Trouble Shooting Guide.....	7
Disposal Information.....	7
Igenix Warranty Terms and Conditions.....	8-9

## IMPORTANT SAFETY INSTRUCTIONS

Please read this user manual carefully to ensure proper use, maintenance and installation.

 
- Read all instructions carefully and keep this manual for future reference.
- Only use on 220-240VAC, 50-60Hz power supply.
- Do not let the appliance touch any hot surfaces.
- To avoid electric shock, do not place the cord, the plug or the appliance in water or other liquids.
- This appliance can only be used by adults.
- Switch off appliance and unplug from the socket when not in use and before cleaning.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Do not place the appliance on an unsteady or cloth covered surface.
- Please check the power cord & the plug before first use to see if they are damaged and check the body to see if there is any damage. If there is any damage please call the customer service number for assistance.
- Do not use the fan in an area with high humidity, if the temperature is higher than 40°C or in a dusty area.

- Do not insert fingers or other objects into the fan, especially during operation. Warn children of the danger and do not leave them unsupervised with the appliance when it is in operation.
- Do not use detergents or chemicals near the appliance to prevent damages to the plastic.
- This appliance is for household use only. Do not use outdoors or for any commercial or industrial purpose.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- Children should be supervised to ensure that do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the sole distributor, its service agent or a qualified electrician in order to avoid a hazard and invalidation of the warranty.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooker or other heating appliance.
- Do not hang or mount fan on a wall or ceiling.


## **SPECIFICATION**

Model	DF0050 / DF0050BL
Rated voltage	220-240 V~50-60Hz
Rated power	105W
Protection class	II

# APPLIANCE OVERVIEW

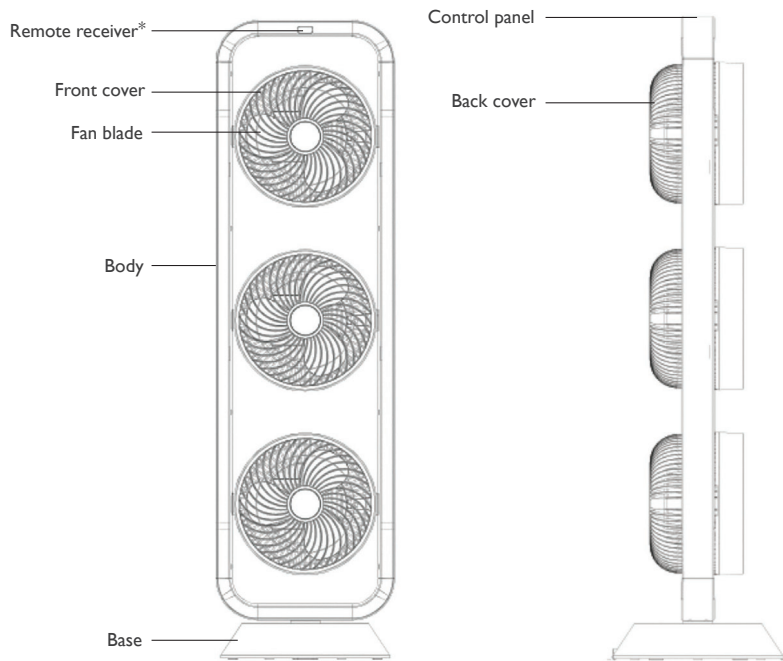

# CONTROL PANEL

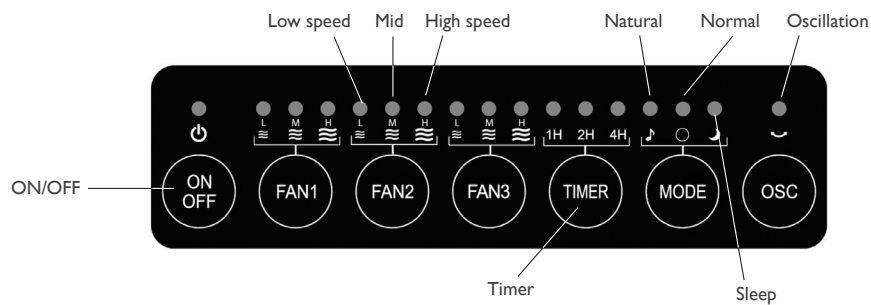 

# OPERATING INSTRUCTIONS

Check the household voltage to ensure it matches the specification on the rating label.

## ON/OFF

When the appliance is plugged in, you will hear a beep to indicate there is power to the appliance. Press the "ON/OFF" button once and the appliance will switch on. When first switched on the appliance will automatically operate at the Low speed setting until changed.

## SPEED

The appliance has 3 speed settings: low, mid and high. Each fan can be operated separately when selecting speed. When you chose a speed, the indicator light will display the following symbols based on your selection:

 - Low speed

 - Mid speed

 - High speed

## TIMER

The timer has a minimum setting of 1 hour and a max setting of 7 hours. Each time you press the timer button on the control panel or the remote it will add one hour to the timer. The timer will display the following indicator lights to show the increasing time set from 1 hour to 7 hours:

Indicator Light	Time Set
1H	1 hour
2H	2 hours
1H + 2H	3 hours
4H	4 hours
1H + 4H	5 hours
2H + 4H	6 hours
1H + 2H + 4H	7 hours

## OSC:

Press the "OSC" button once and the unit will begin oscillating, press again to stop oscillation. You can adjust the vertical angle of each individual fan head by manually moving them - the upper fan is adjustable by 30-90 degrees, the middle and lower fans are adjustable by 30-60 degrees. Do not move the individual fan heads whilst the fan is oscillating.

## MODE:

Press this key to set the fan mode: Normal, Natural and Sleep.

- **Normal Mode:** The fan will work as set speed.
- **Natural Mode:** Fan speed will fluctuate automatically in a set time interval to simulate natural wind.
- **Sleep Mode:** Fan speed will fluctuate automatically in a set time interval to provide a comfort sleeping environment.

## Remote Control:



**ON/OFF:** Press once to turn the fan on and again to turn it off.

**MODE:** Select from the following modes- Natural/ Sleep/ Normal

**FANS:** Press to select and adjust speed to low/ mid/ high for each fan.

**TIMER:** Press to set the timer, once selected the timer lights will turn on as shown in the table in the Timer section. Each press will select an extra one hour on the timer up to a maximum time of 7 hours.

**OSC:** Press to make the fan oscillate.

NOTE: Remote must be pointed at the sensor on the front of the unit underneath the control panel. Please see \*Remote receiver on appliance overview

## CLEANING AND MAINTENANCE

 
Turn off the fan and remove the plug from the power supply before cleaning.

- Use a dry, soft cloth to remove any dust from the fan.
- If the fan is particularly dirty, use a soft damp cloth and wipe dry.
- Do not use any chemicals or detergents as they will damage the fan.
- It is recommended to cover the fan with a plastic bag before storage to prevent dust collecting on fan blades.
- Store the fan in a ventilated and dry area.
- Do not allow water to get inside the body of the fan.

## MAINS PLUG FUSE REPLACEMENT

### Fuse Replacement (Class II)

Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.

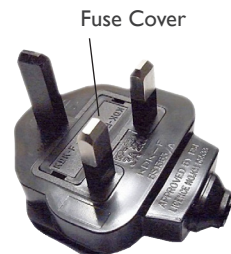

## TROUBLESHOOTING

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services on 01473 271272

Problem	Possible Cause	Possible Solution
The appliance does not work.	The appliance is not properly plugged into the wall socket	The appliance is not properly plugged into the wall socket
	The appliance is not switched on	Make sure the appliance is switched on
	There is no electricity running through the mains wall socket	Check the fuse or breaker

## DISPOSAL INFORMATION



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

## Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department  
38 Bluestem Road, Ransomes Europark  
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the Batch Code on the front of the manual and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed guarantee period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.





## **Thank you for choosing Igenix**

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **[www.igenix.co.uk](http://www.igenix.co.uk)**





# **igenix**

**38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR**

**Tel. 01473 271 272**

Disclaimer: Igenix operate a policy of continual improvement and development.  
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.  
All diagrams and images shown in this manual are for illustration purposes only.