


Oil Filled Radiators

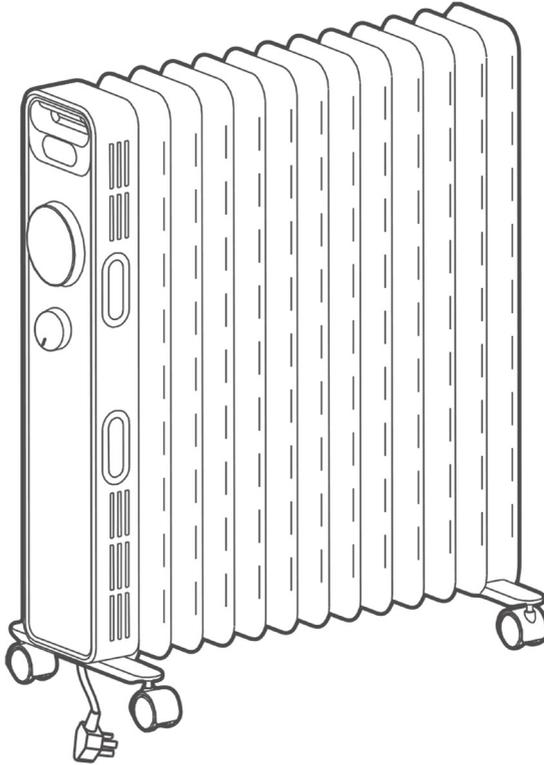

For models:

IG2615 / IG2620 / IG2625

PO Number:

IMPORTANT: THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE

Please read these instructions carefully before use and retain for future reference

Before switching on you appliance

Always check for any damage which may have been caused in transit

CONTENTS

Safety instructions.....	3-4
Appliance Overview	5
Operating Instructions.....	6
Cleaning and Maintenance	7
Fuse Replacement	7
Product disposal and recycling.....	7
Igenix Warranty	8-9

SAFETY INSTRUCTIONS



WARNING: In order to avoid overheating, do not cover the heater.

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
3. The heater must not be located immediately below a socket-outlet.
4. Do not use this heater in the vicinity of a bath, shower or swimming pool (or other body of water)
5. Children of less than 3 years should be kept away unless continuously supervised.
6. Children aged from 3 to 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 to 8 years shall not plug in, regulate and clean the appliance nor perform user maintenance.
7. **CAUTION: Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.**

8. This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil-container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak. When scrapping the heater, follow the regulations concerning the disposal of oil.




9. **Correct Disposal of this product**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, re-cycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


10. This heater cannot achieve accurate temperature control of the environment, and thus cannot be used as insulation device for storage environment, items, animals and plants.

APPLIANCE OVERVIEW

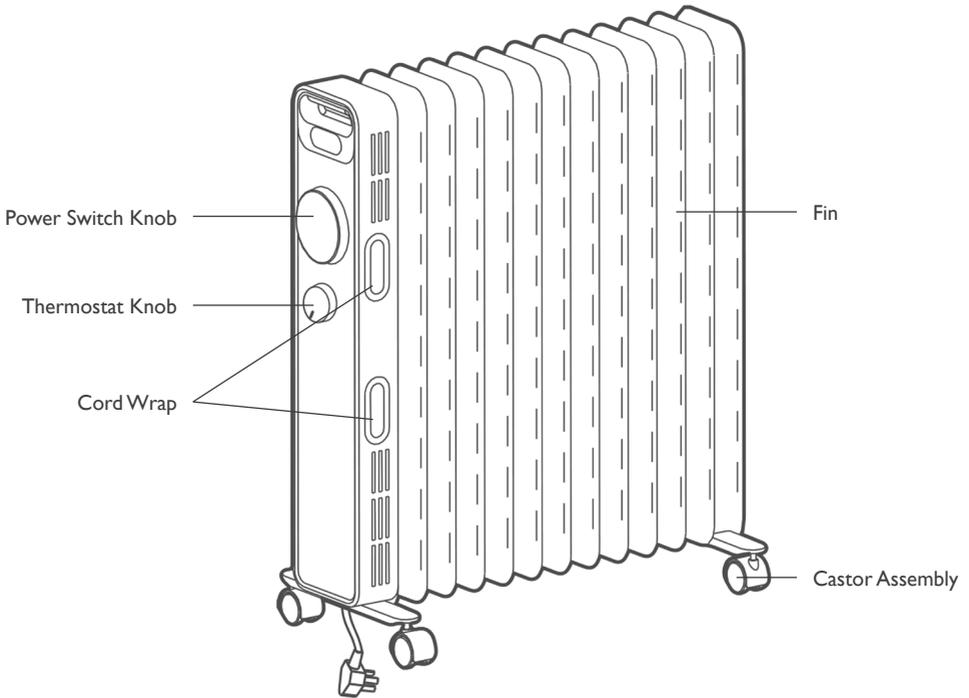

Mounting the Castors

1. Turn the heater upside down.
2. As shown in figure 1, align the mounting hole of the castor assembly and install it on the screw of the castor pad plate at the end of the radiator fin. The other castor assembly is aligned to the screws mounted at the bottom of the control box.
3. As shown in figure 2, tighten the two sets of castor assemblies with four butterfly nuts. Tighten the nuts and then return the heater to an upright position with the wheels on the ground.

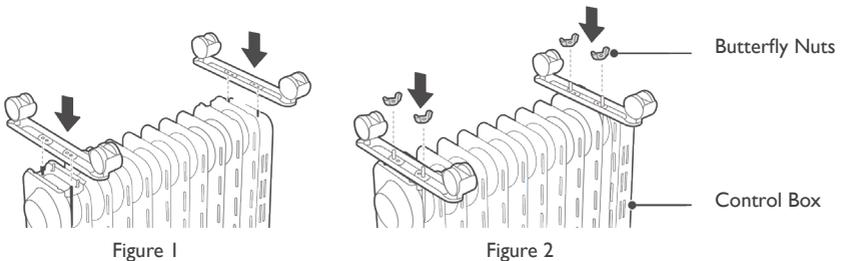

OPERATING INSTRUCTIONS

Inspection before operation

1. Check that the power cord is not damaged or fractured.
2. Please verify the rated current of the power socket is in line with the requirements on the rating label and is equipped with a safety grounding device before use; otherwise, replace the socket.

Start and Power Selection

1.Start

- Plug in the power and turn the thermostat knob clockwise to the “+” mark position.
- Turn on the power switch and the heater will begin to operate.

2.Power Selection

Under normal circumstances please use the maximum power “III” gear for rapid heating. If the room temperature reaches a suitable temperature, please choose a lower power “II” or “I” gear to reduce energy consumption and to prevent the room becoming overheated.

Inspection method

Insert the power plug into the socket and turn the heater on. After about half an hour turn off and pull out the plug. Check whether the plug pins are hot. Replace the socket if it is more than about 50 °C to avoid burning the plug or causing a fire caused by overheating of the socket due to poor contact.

Temperature adjustment

During use, if you feel it is necessary to lower the room temperature since it is too high, you can use the following adjustment modes:

1. Turn the power switch to gear “II” or “I”.
2. Turn the thermostat knob counterclockwise to set the temperature lower. The temperature is lower when the indication is closer to the “-” position.

Stop

Turn the power switch to point “0” and then pull out the power plug.

Movement of the heater


To move the heater, turn it off first, and pull out the power plug; then push the body using the four casters at the bottom of the unit.

CLEANING AND MAINTENANCE

Before attempting any cleaning or maintenance on the radiator, allow it to cool completely and ensure that the plug is removed from the socket.

1. The electric heater should be cleaned regularly to wipe out the dust on the surface of flanges as this may influence the radiating efficiency.
2. Disconnect electricity supply and allow radiator to cool, wipe out dust with a soft damp cloth. Do not use detergent or abrasives.
3. Do not scrape the surfaces of the flanges with sharp hard tools in order to avoid surfaces getting rusty due to damage to the paint coat.

MAINS PLUG FUSE REPLACEMENT

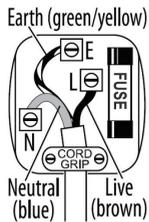

Fuse Replacement (Class I)

This appliance must be earthed. Remove the central screw on the plug and open the shell. Take out the fuse and replace with a new fuse of the same Amp. Install the shell again and tighten the screws.

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and the electricity supply.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
38 Bluestem Road, Ransomes Europark
Ipswich, IP3 9RR**

Please quote the Product Code which begins 'IG' or 'DF' and the PO Number on the front of the manual, and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



Thank you for choosing Igenix

As a valued customer we would like to offer you a FREE 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within 30 days of purchase. The full Terms & Conditions of our warranty policy are shown on the opposite page. They are also available on our website. **www.igenix.co.uk**

igenix

38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR

Tel. 01473 271 272

Disclaimer: Igenix operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.